
ercol

 
teramo 2610 Dressing Table

Thank you for purchasing this teramo dressing table. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Installation shall be carried out exactly according to the manufacturers instructions, otherwise a safety risk can occur if incorrectly installed.

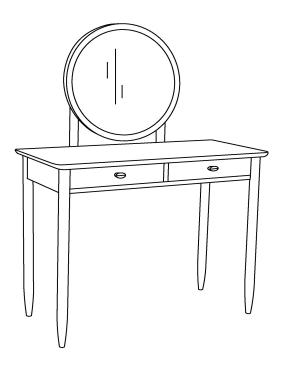

This item is **HEAVY**









Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


This product takes approximately **30 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Ref: 00237/2610


Fittings and parts checklist

А	Top & Drawer box x I	G	Wedge x 2
В	Left leg × I	Н	M6*30 Bolt × I2
С	Right leg × I	ı	Allen key x I
D	Left mirror support x		
Е	Right mirror support x I		
F	Mirror x I		

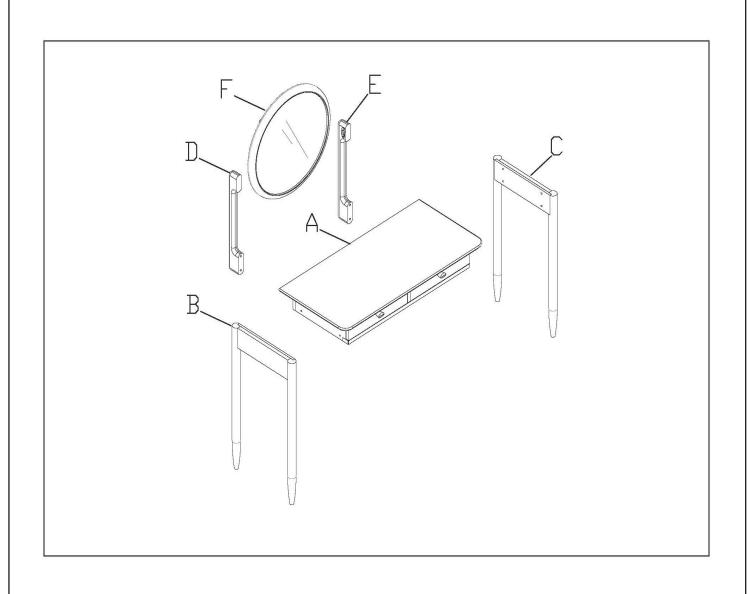


Step by step assembly instructions


1. Take the drawer out of the drawer box(A) unit as shown below.

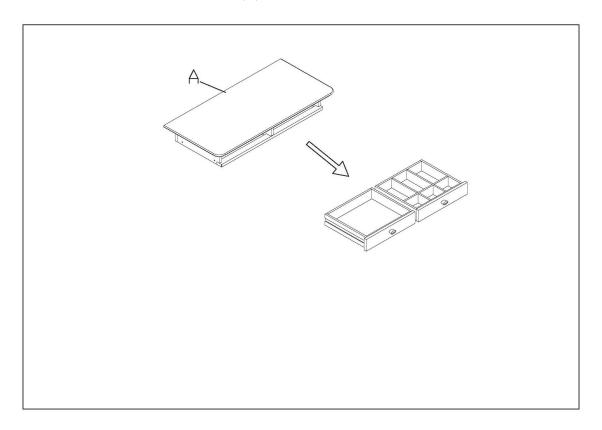


2. Attach the left leg(B) and right leg(C) onto the drawer box unit(A) using M6*30 bolt(H) 8pcs as shown below.

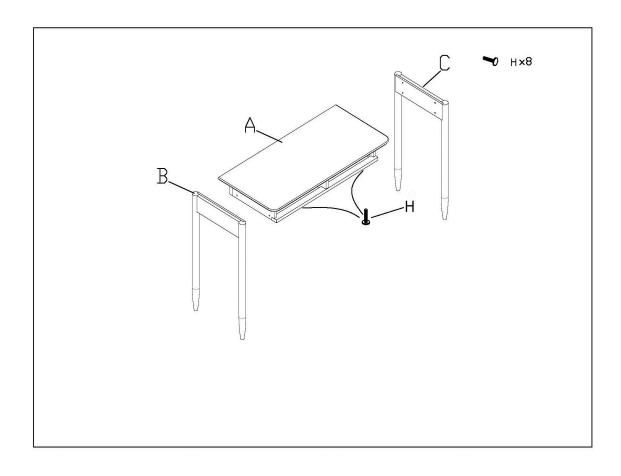


3. Attach the left mirror support(D) and right mirror support(E) onto the drawer box unit(A) using the 4pcs M6*30 bolt(H) as shown below.

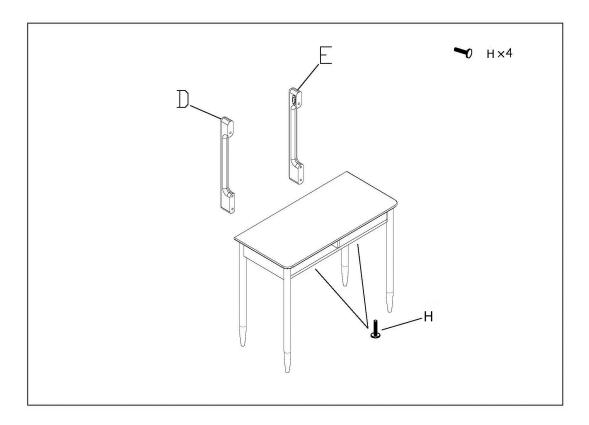


4. Put the mirror(F) onto the mirror supports(D&E) as shown below.

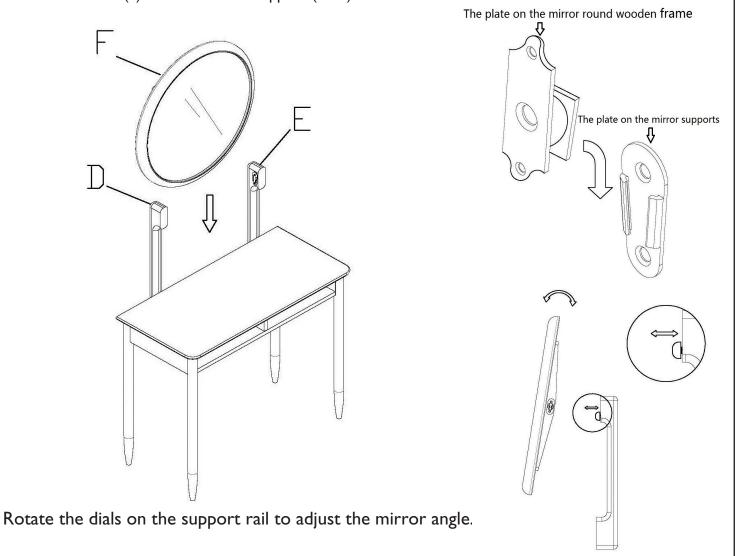

5. Put back 2pcs drawers into the drawer box unit (A) and assembly steps finished.

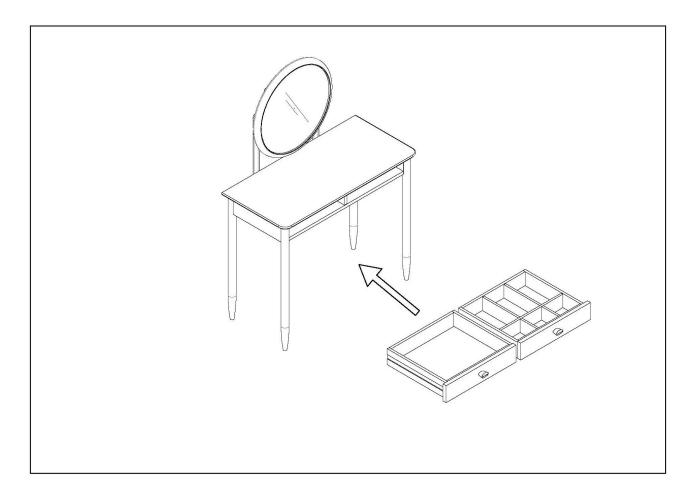

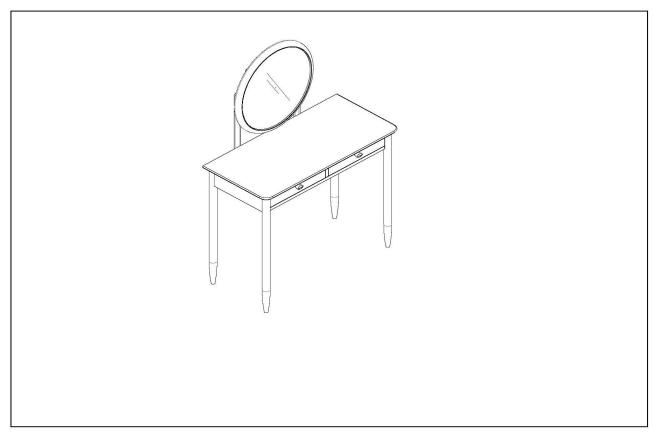



Wall fixing instructions

Thank you for purchasing this ercol product.


Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Installation shall be carried out exactly according to the manufacturer's instructions, otherwise a safety risk can occur if incorrectly installed.

WARNING: In order to prevent overturning this product must be used with the wall attachment device provided.

Fittings and parts checklist



Wall fixing - if in doubt seek professional advice

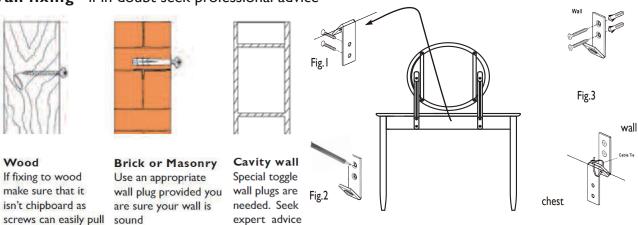

- I. See Fig. I. Screw one of the brackets on to the back of the chest in the middle, using the short screws provided. Make sure the top of the bracket is below the top of the chest. Position the chest against the wall where you want it to go, place the second bracket onto the wall below the one fixed to chest and mark where the holes come on the wall. Move the chest away from the wall.
- 2. Attach the wall bracket using screws suitable for your type of wall, see Wall fixings above.
- 3. Place the chest back against the wall so the two brackets match up and tie them together with the plastic strap provided. The plates need not match exactly, but the plastic tie must go through each plate. Close the strap, but do not over tighten it. See Fig. 3.

Warning

away from the core

structure

Serious or fatal crushing injuries can occur from furniture tipping over.

To prevent this furniture tipping over it must be permanently fixed to the wall.

Wall attached item only.

A guide to wall mounting and fixings

Warning

 
Serious or fatal crushing injuries can occur from furniture tipping over.

To prevent this furniture from tipping over it must be permanantly fixed to the wall.

Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.




Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.



 Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.



For use when attaching light loads on to plasterboard partitions.

 
3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


5. Hammer Fixing wall plug








For use with heavier loads such as TV and Hi-Fi speakers and satellite dishes

     
Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

 















If the chest is not level on your floor use the wedges provided, and snap them off so that they do no Protrude out from the cabinet's legs, you can also snap them lengthways if desired.

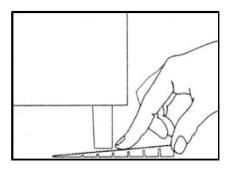

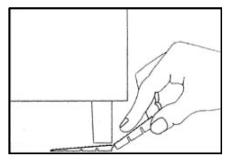

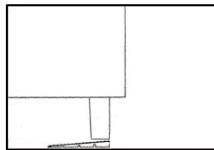

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX www.ercol.com