ercol

ercol Winslow Double Bedstead Stock Number: 4170/455



H107 W150 D207cm

Thank you for purchasing the ercol Winslow Double Bedstead. Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

We are committed to making great products possible.

From our in-house Design Team, to our Buyers, we work together to bring great design to life.

Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell.

We are all committed to designing and developing products to the highest industry standarts.

We hope you are happy with your ercol product and welcome any feedback or comments you may have.

Tools Required	
Time to assemble I hour	
People to assemble	

Important safety information

Warnings


- \triangle The product should only be used on firm, level ground.
- \triangle Keep small parts ot of reach of children.
- \triangle Ensure the product is fully assembled as illustrated before use.

Do's


- Check the pack and make sure you have all the parts listed.
 Check all screws or bolts are tightened and inspect regularly.
 Make sure the legs remain in contact with the ground at all times.

Dont's

- Do not over tighten screws or bolts.
 Do not stand on the product.
- X Don not use power tools to construct as overtightening and panel failure may occur.

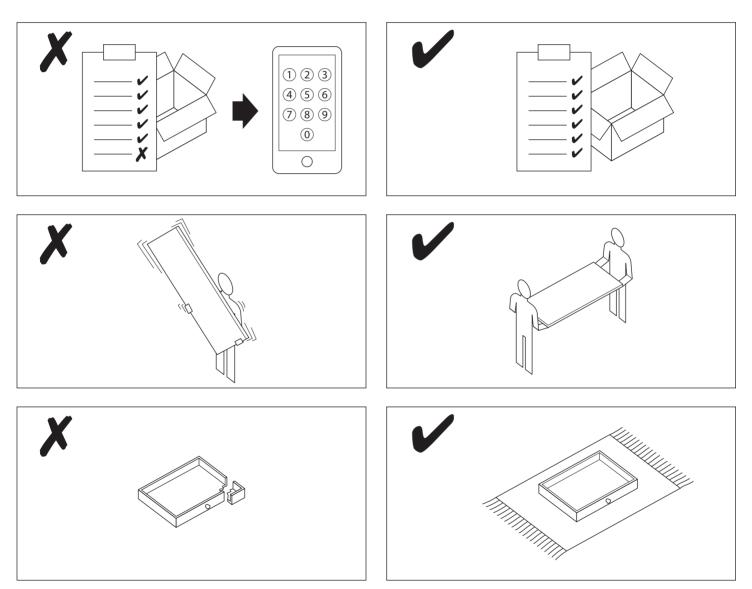


Your Bed

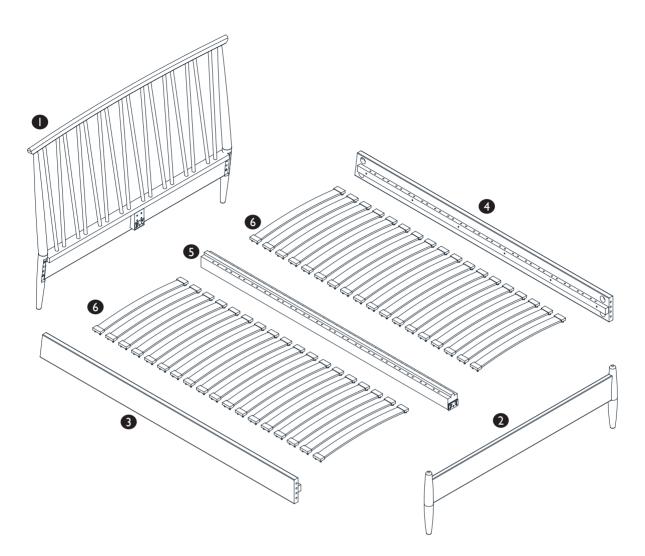

Ref	Description	Dimensions	Qty
0	Headboard	1070mm x 1508mm x 186mm	I
2	Footboard	405mm x 1455mm x 50mm	I
3	L/H Side Rail	159mm x 1941mm x 30mm	I
4	R/H Side Rail	159mm x 1941mm x 30mm	I
6	Centre Rail	90mm x 1884mm x 72mm	I
6	Bed Slats		36

Internal dimensions Stock number: 4170/455 Overall size: H107 W150 D207cm

Fixtures and fittings

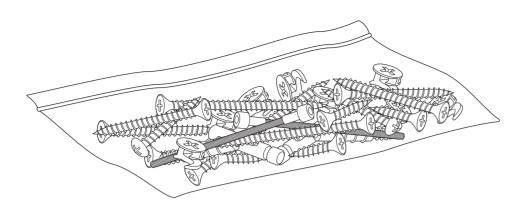

Fixtures and fittings supplied (actual size)		mm 0 10 20 30 40 50 60 70 80				
Ref	Description	Dimensions	Qty			
۵	Headless Bolts	8x67mm	8			
B	Fixing Head		8			
C	Hex Nut		8			
D	Wooden Dowel	10mm × 35mm	8			

Fixtures and fittings supplied (not actual size)

Ref	Description	Dimensions	Qty	
8	Slat Holders	27mm x 30mm x 58mm	72	
6	Wrench	MI3	I	


Product Assembly Winslow Double Bedstead


4170

Step I Parts, fittings and tools

Screw 8x headless bolts (A) to the headboard (1) and the footboard (2).



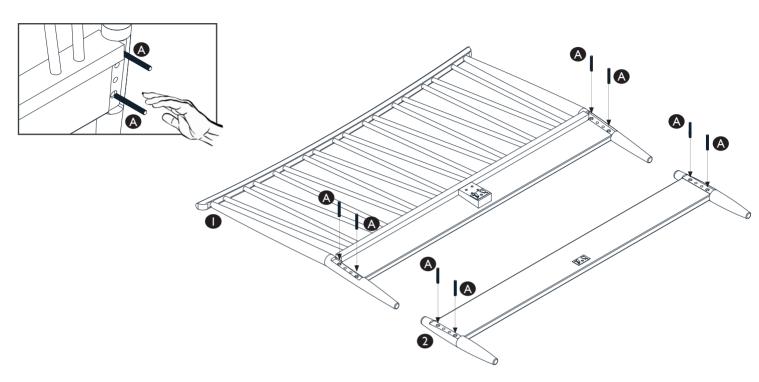

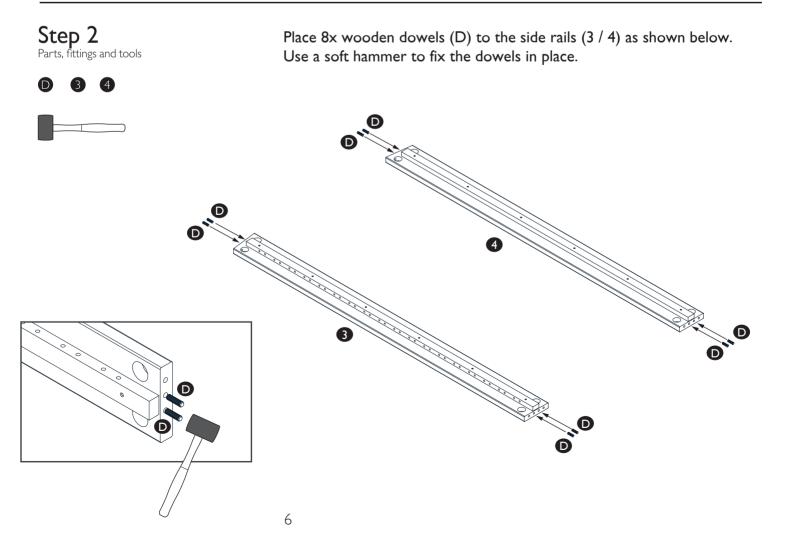



Winslow Double Bedstead 4170






Place 4x fixing heads (B) into the slots on the side rail (3 / 4). Attach the side panels (3 / 4) to the headboard (1) as shown below. Then fix the 4x hex nuts (C) by using a wrench (F).

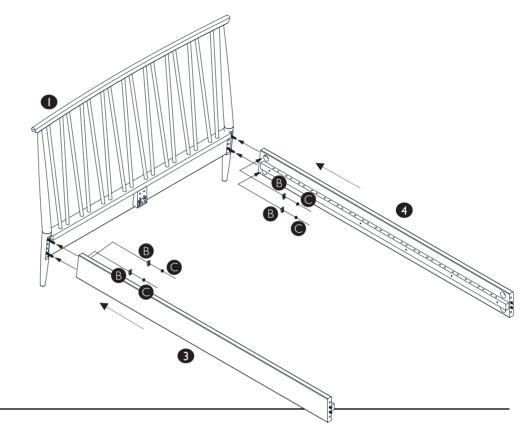


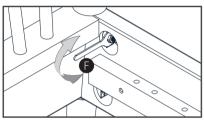


Step 4 Parts, fittings and tools

 2 B G G



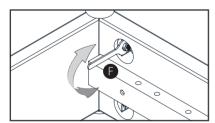


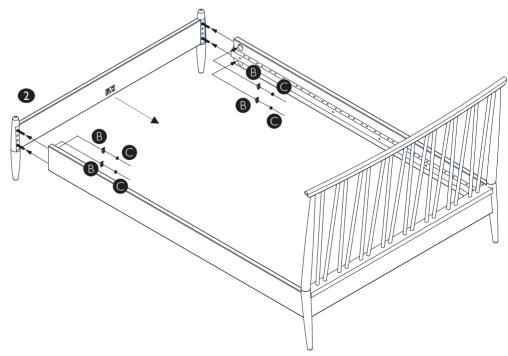


Step 5 Parts, fittings and tools

5


Place the center rail (5) on the metal attachment pieces as shown below.

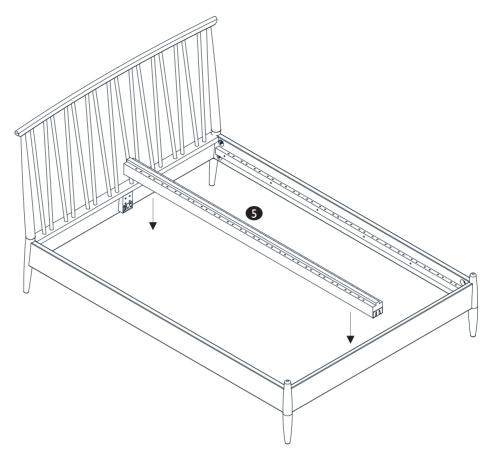

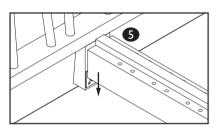


Step 6 Parts, fittings and tools



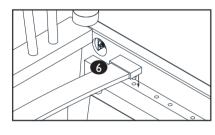

ATTENTION If any slats are splintered, then please do not use. Leave a space near the top of the bed and order a replacement from us directly using the stock number on the front of this instruction

Place 72x slat holders (E) to both ends of the bed slats (5). Attach 36x bed slats (5) to the center rail and the side rails by pushing the slat holders (E) downwards.

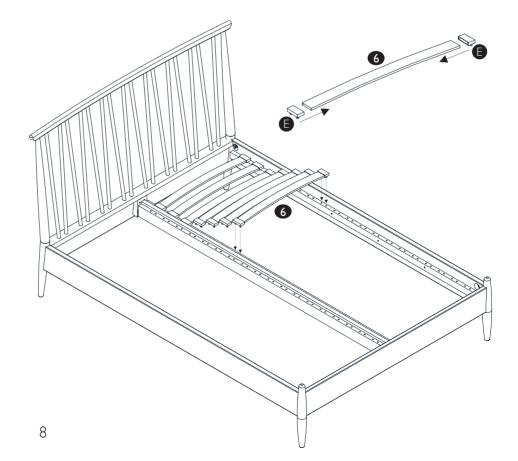

ercol

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way it is cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with hard lacquer, wax polish or painted surface should be dusted with a dry cloth. When using the surface for serving food and drinks it is best to use protective mats and coasters. Spillages should be wiped up as soon as possible.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time. Use of cleaning materials containing abrasive compounds, acidic or caustic reagents and any bleaches containing oxidising reagents should be avoided as prolonged use may damage the lacquer surface. Wipe up spills immediately. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water. The offending area should be rubbed lightly and then completely dried immediately afterwards, before replacing any mats etc.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it. Please take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX **www.ercol.com** Tel: 01844 271800 Office Hours: 9.00 - 5.00