


ercol

4370 HEXTON UPHOLSTERY

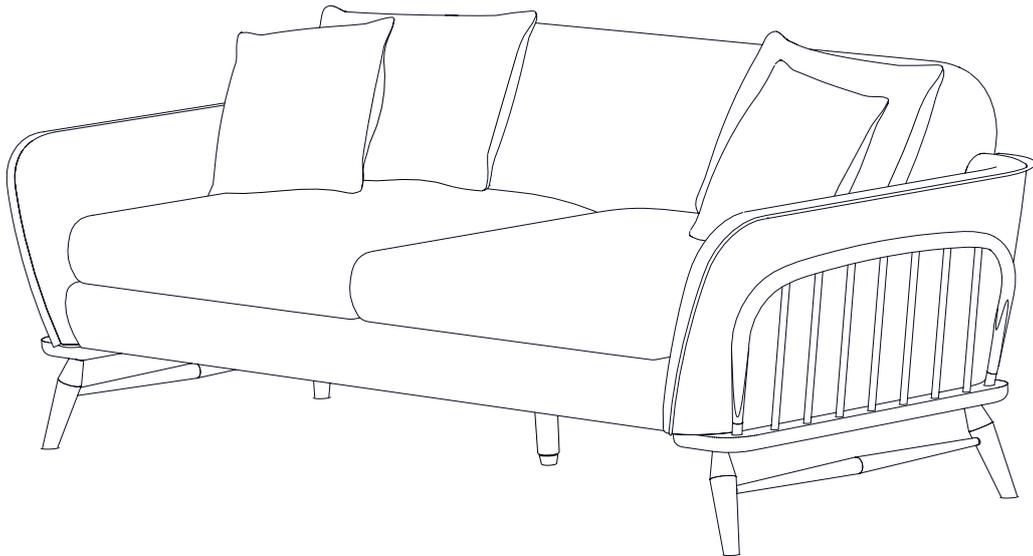

 
Thank you for purchasing this Hexton Upholstery. Please ensure instructions are read in full before attempting to assemble this product.

PREPARATION

This is a two person operation



Tools you will need



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.



This product is **HEAVY**, it should be assembled as near as possible to the point of use.

TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.


Read this leaflet in full before commencing assembly.

Fittings and parts checklist

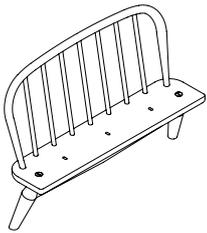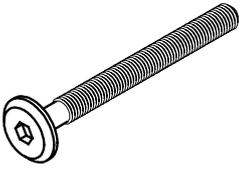
A	Hexton Legs x 2	
B	Adjustable Centre Leg x 1 (only on Large Sofa)	
C	M6 x 60mm Bolt x 6	
D	Allen Key x 1	
E	Self Adhesive Felt Pads x 4 (Optional)	

Hexton assembly instructions


1. Carefully turn the sofa or chair on to its front.
2. Position one set of Hexton legs (A) on one side of the sofa ensuring the holes in both the legs and upholstery align. Take 3 bolts (C) and using the Allen key (D) tighten each bolt in place clockwise.

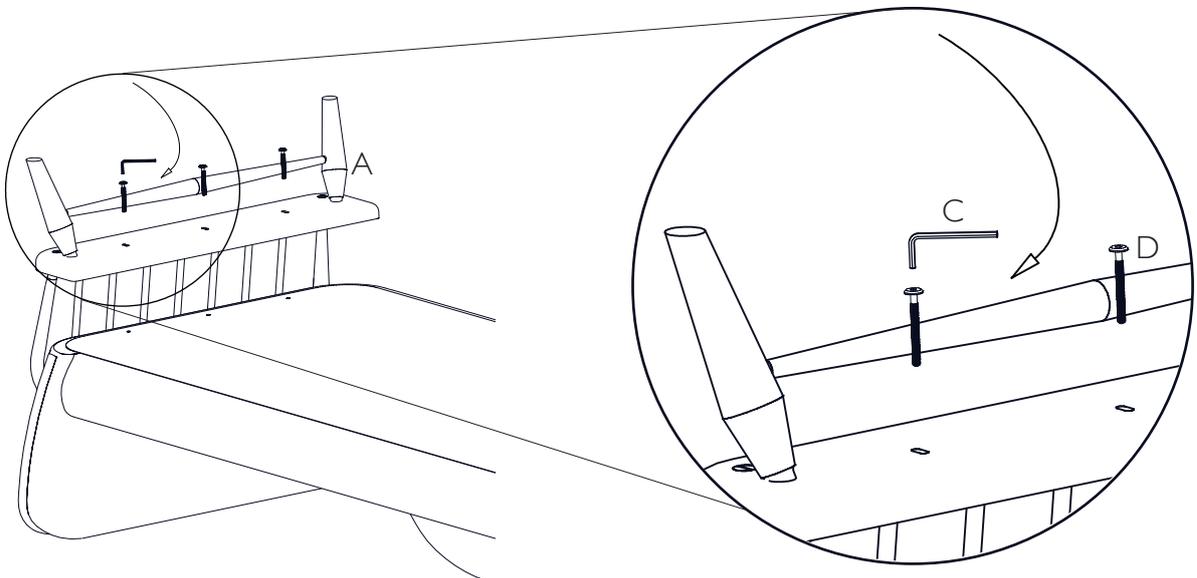

3. Repeat on the remaining side.

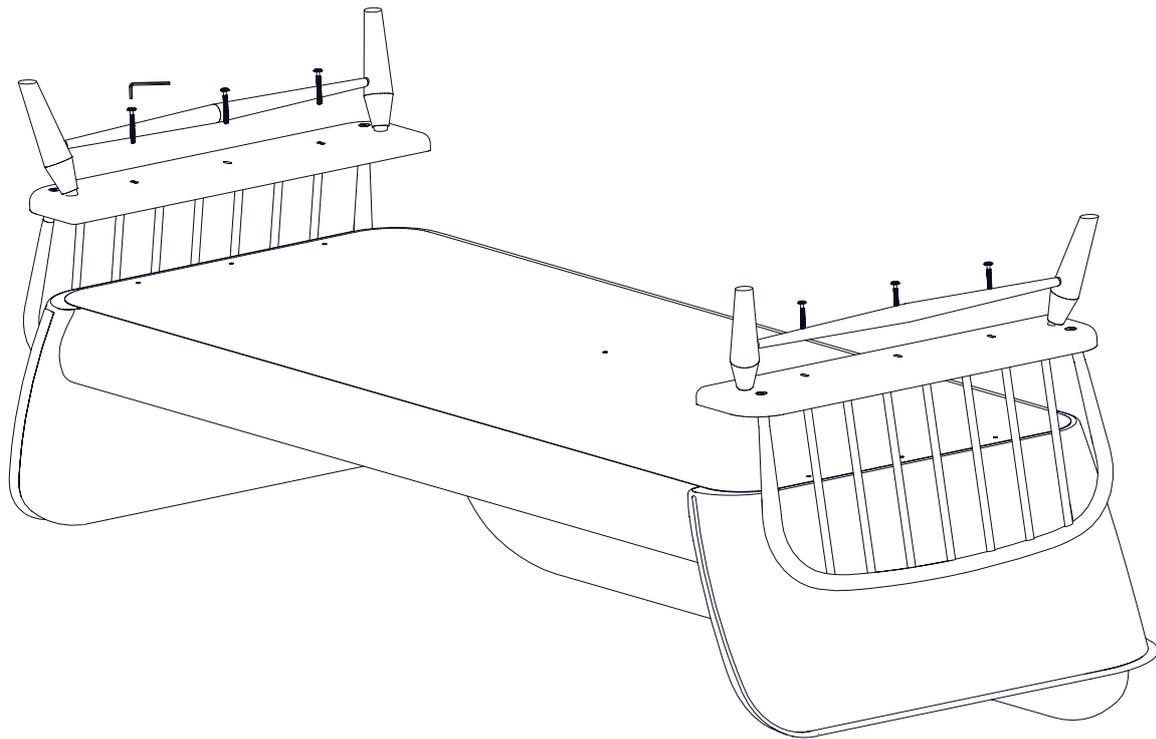


4. For Large sofa only: Take the adjustable centre foot (B) and align in the hole in the centre of the base as shown. Tighten leg in place by turning clockwise. To adjust the height of the leg turn the end of the foot.

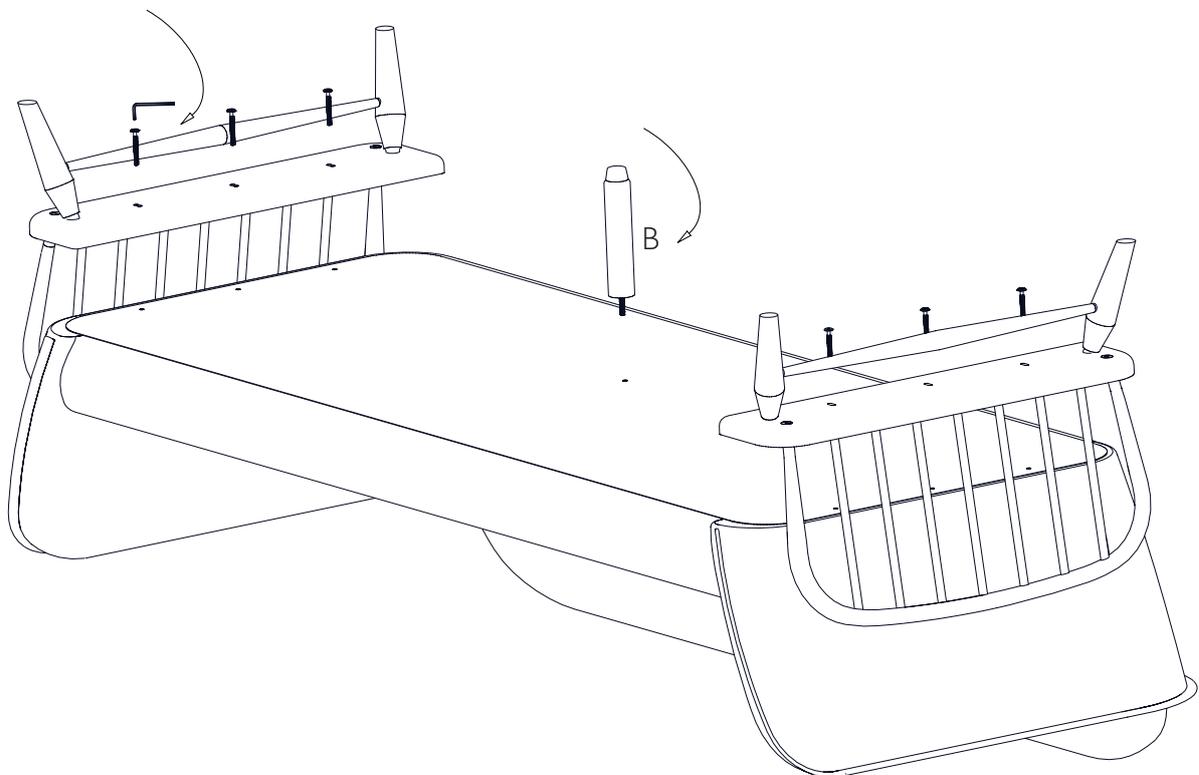

OPTIONAL STEP: If you have hard floors you may wish to attach the self adhesive felt pads provided on the feet. Simply remove the backing and attach to each of the feet.

5. Carefully turn the upholstery back over and position as required - taking care not to hold by the bent timber as indicated below.

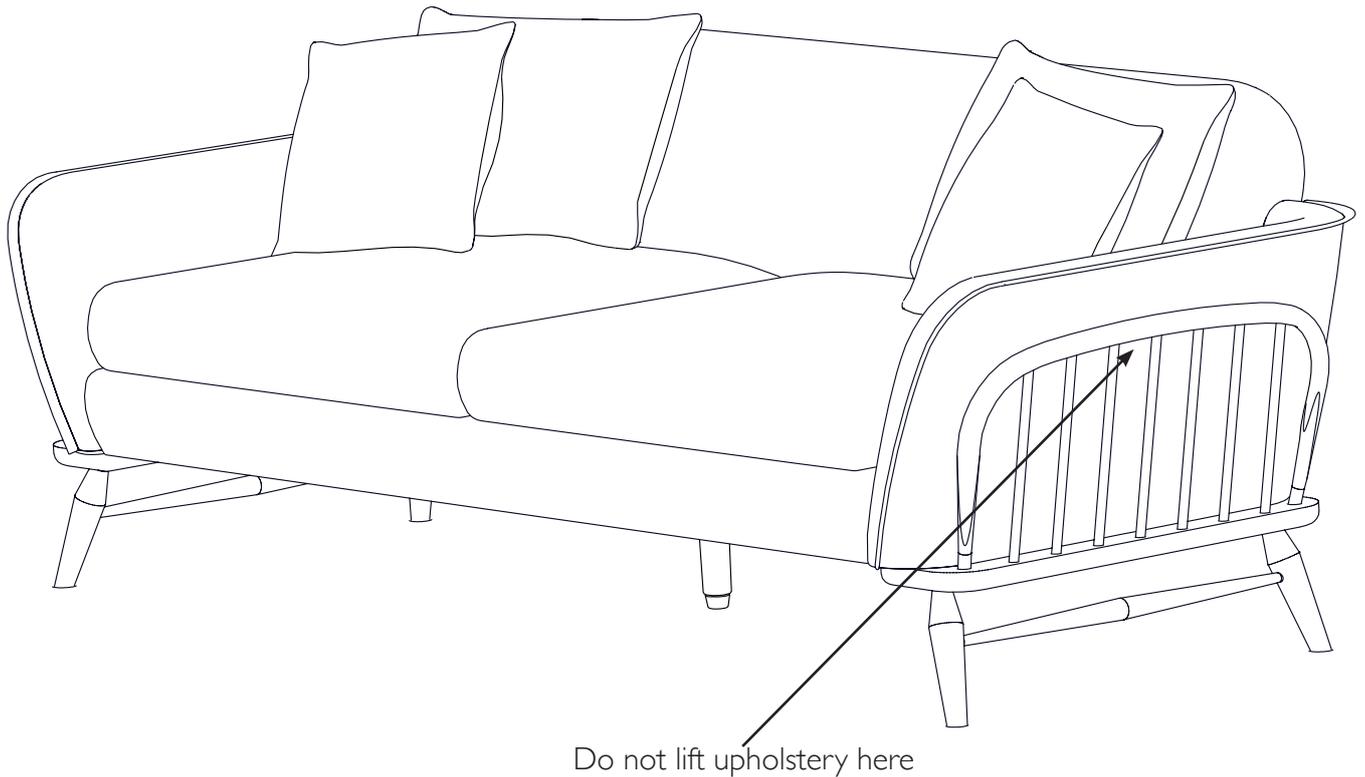

Customer Care

For all customer care queries please contact John Lewis Partnership on 03456 049 049.

Wood Furniture

Wood displays different grain patterns depending on which way it is cut. These are characteristics of the natural beauty of the wood. All timber surfaces will change colour and mellow over time.

Safety Instructions

Never drag furniture when moving it, always lift it. Take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

Fabric Care

Every effort is made to keep colours consistent between batches, but fabric manufacturers cannot guarantee exact matching. All fabrics will fade in sunlight, to prolong the life of the fabric do not place it close to a heat source or in direct sunlight. Plump up cushions after use, especially fibre or feather cushions. If the cushions are reversible turn them at least once a week to minimise wear and maintain their appearance. To prevent dust and dirt accelerating wear, gently vacuum upholstery once a week or use a soft brush. For complete cleaning we recommend a specialist cleaning in situ. Accidental spills and stains should be treated as soon as possible, except mud which should be left to dry and then brushed off. Remove any solids, then blot up as much liquid as possible with white paper towel or a clean cloth. We recommend professional dry cleaning but some action can limit damage.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX ercol.com