

ercol

3795/3796/3797/3798/3799/3800
AOSTA UPHOLSTERY



 
Thank you for purchasing this Aosta sofa, chaise or footstool. Please ensure instructions are read in full before attempting to assemble this product.

PREPARATION

This is a two person operation



Tools you will need



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.




This product is **HEAVY**, it should be assembled as near as possible to the point of use.

TAKE CARE WHEN LIFTING to avoid personal injury and (or) damage to the product.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.


Read this leaflet in full before commencing assembly.

Fittings and parts checklist

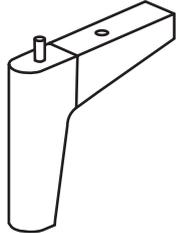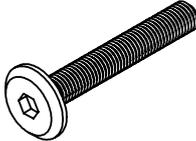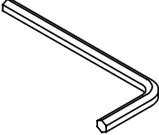A	Aosta Feet 4 x chair, snuggler, all sofa sizes and footstool 8 x chaise units	
B	Adjustable Centre Foot 1 x all sofa sizes 3 x chaise units	
C	M6 x 60mm Bolt 4 x chair, snuggler, all sofa sizes and footstool 8 x chaise units	
D	Allen Key x 1	


Chair, Snuggler, Sofa and Footstool assembly instructions

1. Carefully turn the chair, snuggler, footstool or sofa upside down.
2. Take one of the feet (A) and place dowel in the hole closest to the edge of the sofa. Insert 1 bolt (C) into the hole and secure in place using the allen key (D). Repeat for the other feet. If assembling a sofa attach the adjustable foot (B) in the centre hole.

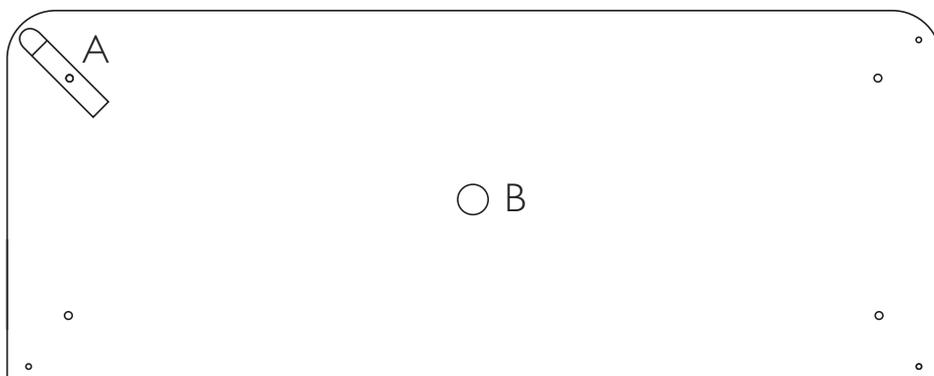


Chaise assembly instructions

1. Carefully turn the each section of the chaise upside down.
2. Starting with the sofa section (1), take one of the feet (A) and place dowel in the hole closest to the edge of the sofa. Insert 1 bolt (C) into the hole and secure in place using the allen key (D). Repeat for the other feet. Attach the adjustable foot (B) in the centre hole.
3. Repeat the process for the chaise side (2). Attach two adjustable feet (B) as shown.

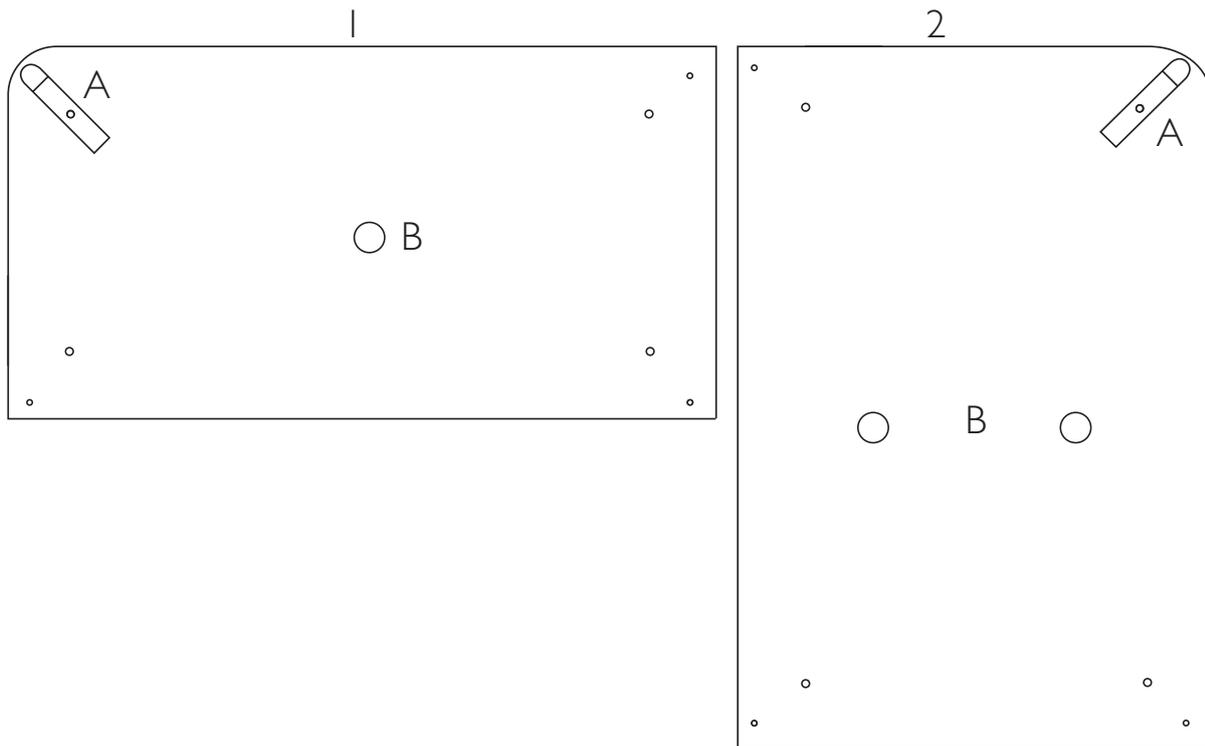

4. To secure the two pieces together carefully lift the chaise section and hook onto the sofa section as shown (3).

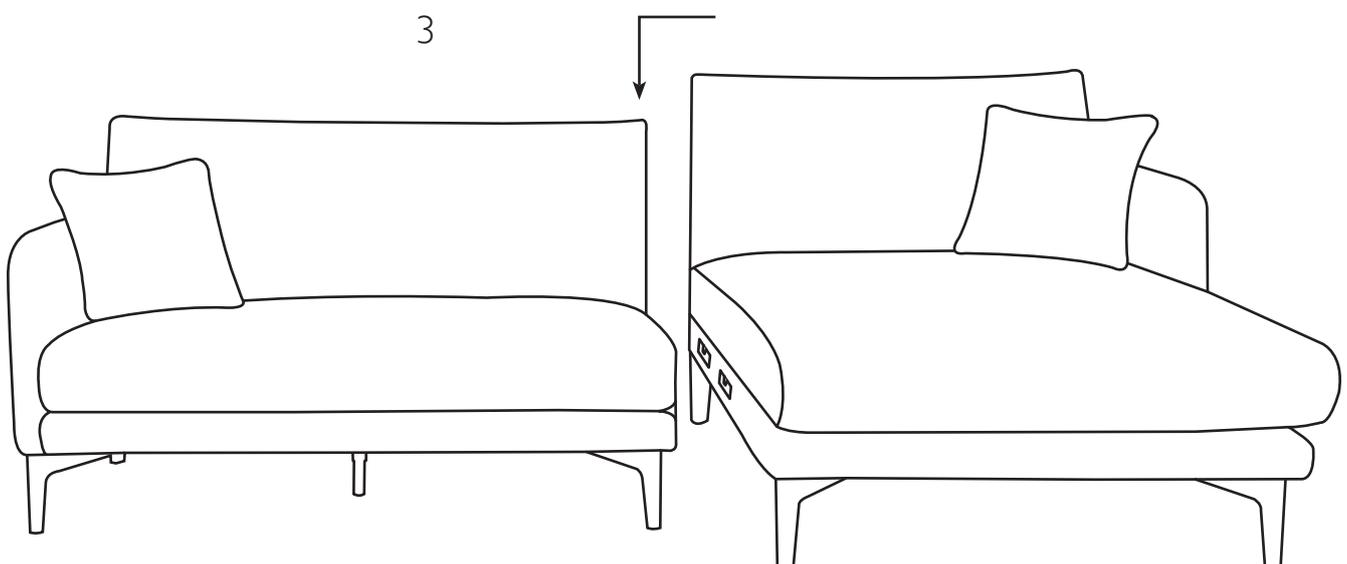

Customer Care

Wood Furniture

Wood displays different grain patterns depending on which way it is cut. These are characteristics of the natural beauty of the wood. All timber surfaces will change colour and mellow over time.

Safety Instructions

Never drag furniture when moving it, always lift it. Take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

Fabric Care

Every effort is made to keep colours consistent between batches, but fabric manufacturers cannot guarantee exact matching. All fabrics will fade in sunlight, to prolong the life of the fabric do not place it close to a heat source or in direct sunlight. Plump up cushions after use, especially fibre or feather cushions. If the cushions are reversible turn them at least once a week to minimise wear and maintain their appearance. To prevent dust and dirt accelerating wear, gently vacuum upholstery once a week or use a soft brush. For complete cleaning we recommend a specialist cleaning in situ. Accidental spills and stains should be treated as soon as possible, except mud which should be left to dry and then brushed off. Remove any solids, then blot up as much liquid as possible with white paper towel or a clean cloth. We recommend professional dry cleaning but some action can limit damage.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX ercol.com