


ercol

5068 Tenon Coffee Table

Thank you for purchasing this Tenon coffee table. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

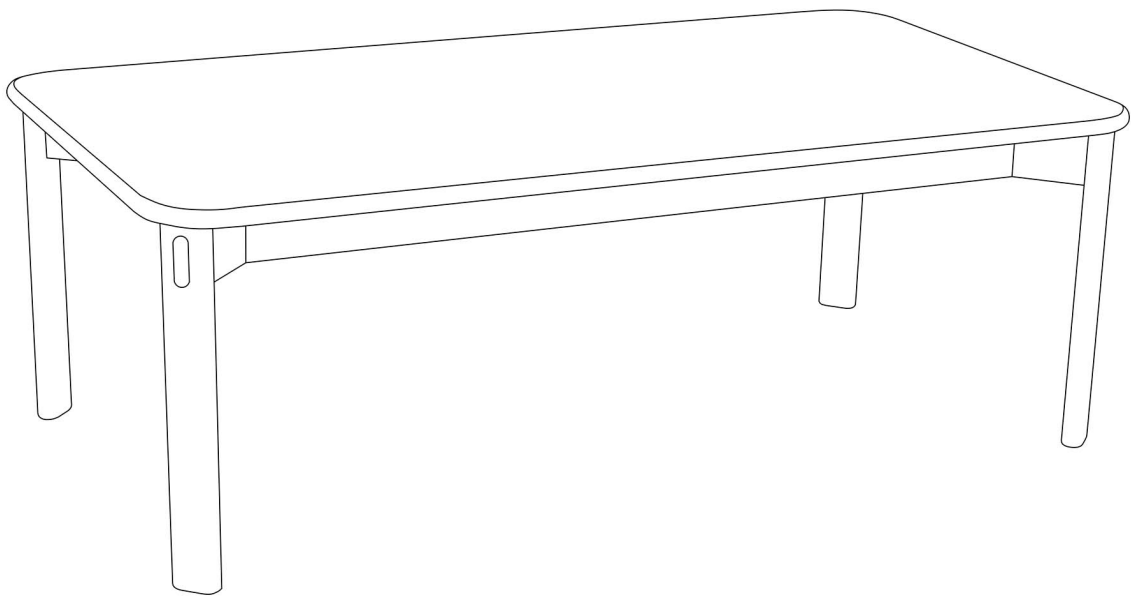

This item is **HEAVY**



Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you purchased this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.




This product takes approximately **15 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Ref: 00329/5068

Fittings and parts checklist

A	Chest Unit x 1	D	Split Washer x 14	
B	Legs x 2	E	Washer x 14	
C	M6*35mm Bolt x 14 	F	Allen key x 1	

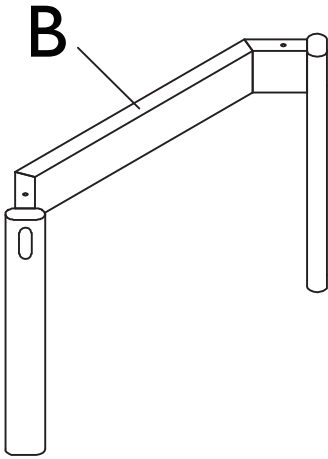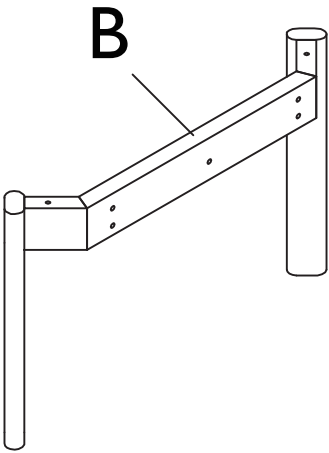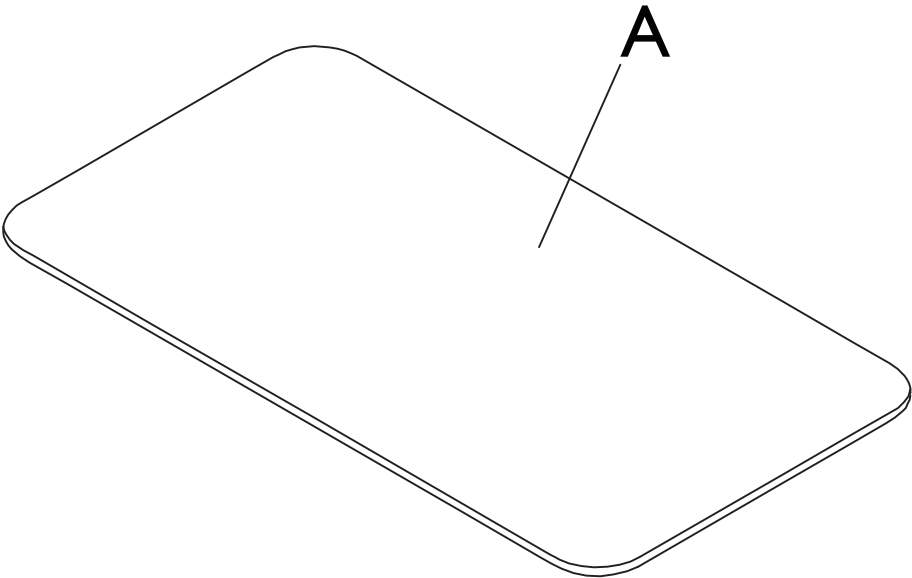


Step by step assembly instructions

1. Two people may be required to carefully turn the table top panel onto a smooth soft surface such as carpet. Attach the leg frames (B) to the bottom of the coffee table by using 14x bolts (C) with the washers (D&E). Fix the bolts (C) by using the allen key (F) provided.


Fittings

 C*14

 F*1

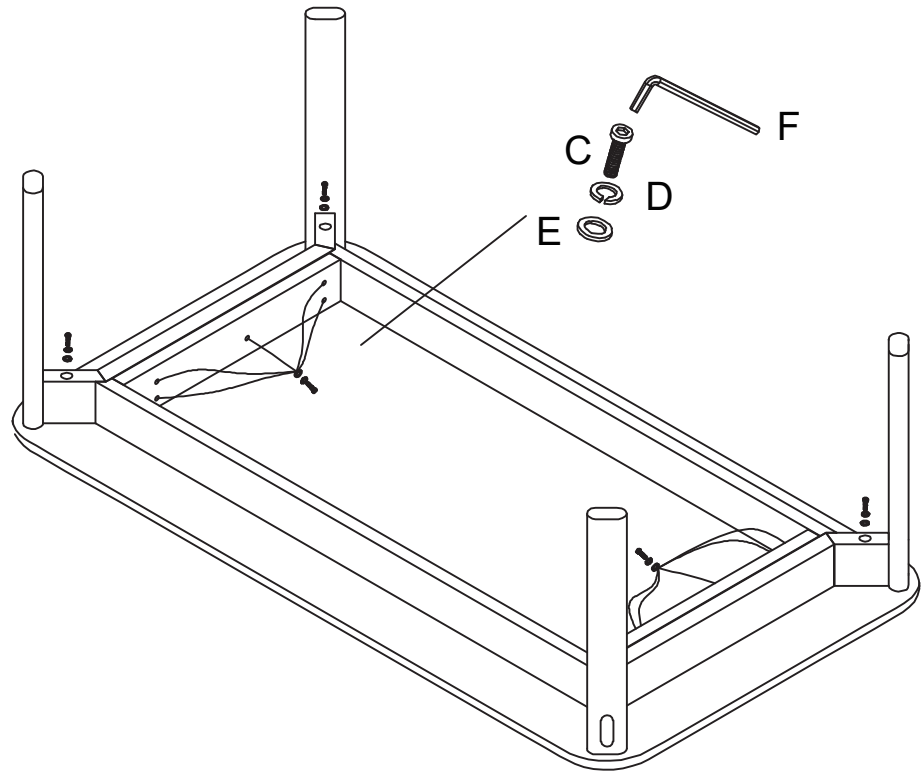

2. After assembling the legs, and with the aid of another person, carefully lift the table and turn it over. Do not turn the table over on two legs as this may cause damage.

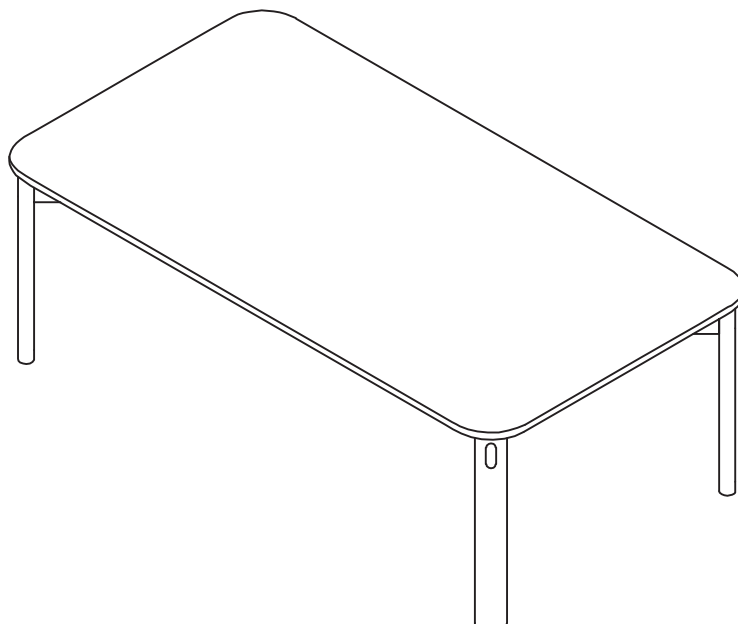

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX www.ercol.com