


# ercol

1810 / 1811 / 1815 / 1816  
CORSO TABLE

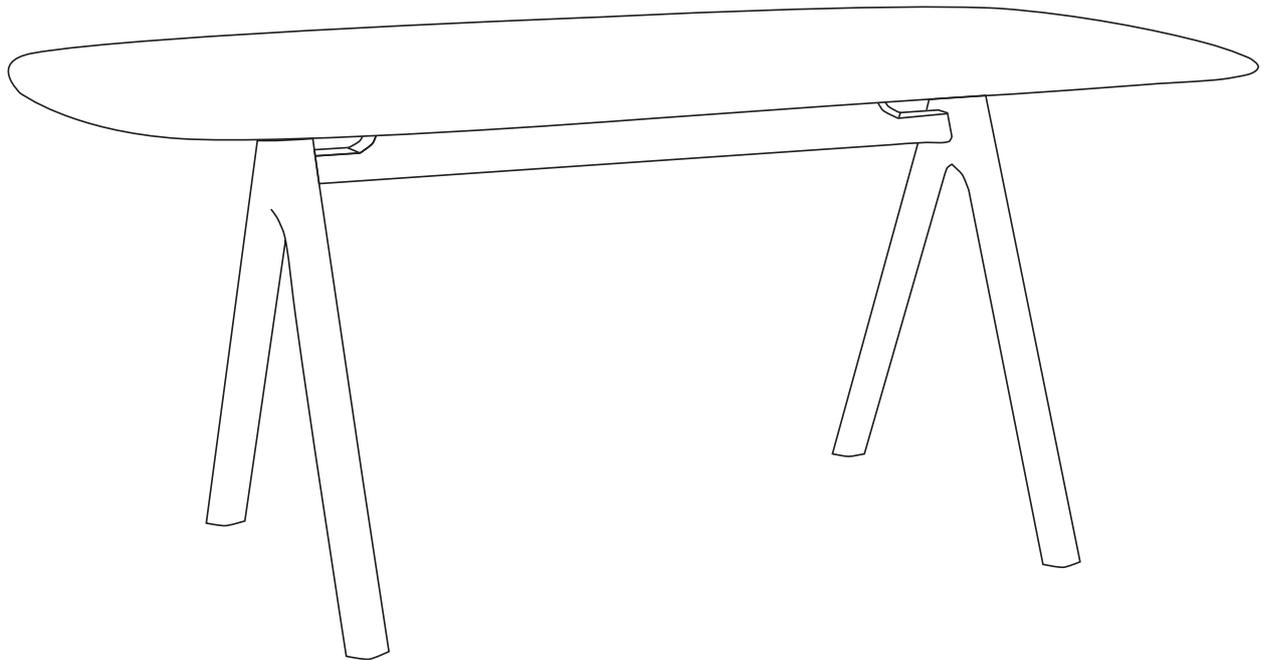

---

Thank you for purchasing this Corso Table. Please ensure instructions are read in full before attempting to assemble this product.

---

## PREPARATION

**This is a four person operation**



**Tools you will need**



---

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


 
 
This product is **HEAVY**, it should be assembled as near as possible to the point of use.

**TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Read this leaflet in full before commencing assembly.


## Fittings and parts checklist

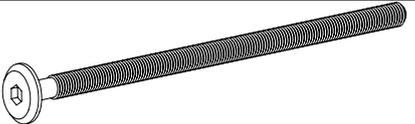A	8x M6 x 20mm Connector bolt	
B	4x M6 x 40mm Connector bolt	
C	4x M6 x 120mm Connector bolt	
D	2x Zip adjuster bolt	
E	2x Zip bolt	
F	1x 5mm Allen key	
G	1x 4mm Allen key	


## Step by step assembly instructions

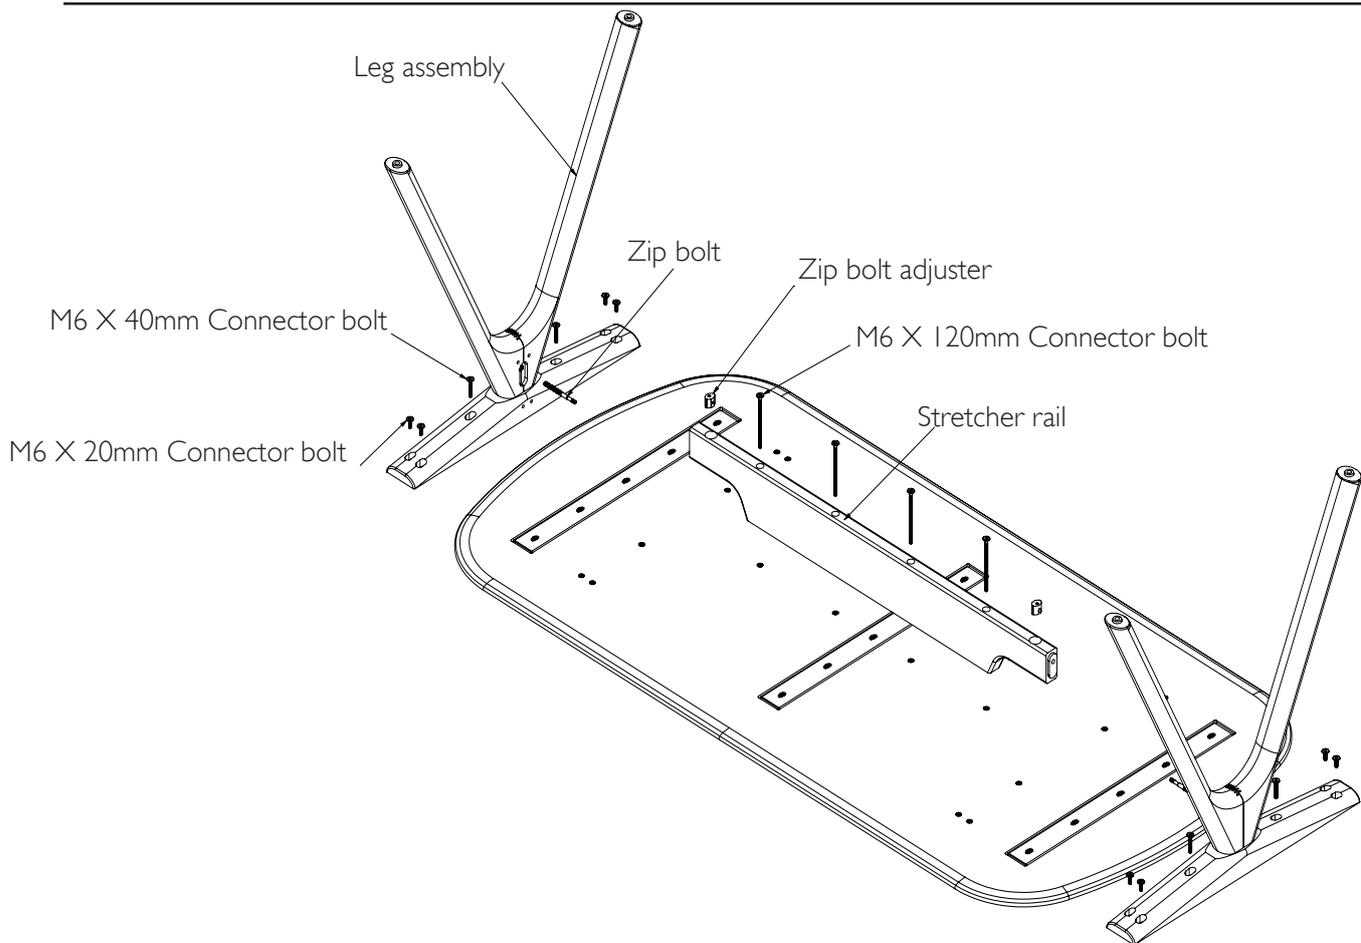


1. Fit the zip bolt (E) into the leg assembly, turning anti-clockwise. Once secured locate the zip bolt (E) into the hole in the end of the stretcher rail. Place the zip bolt adjuster (D) into the circular recess in the stretcher rail.

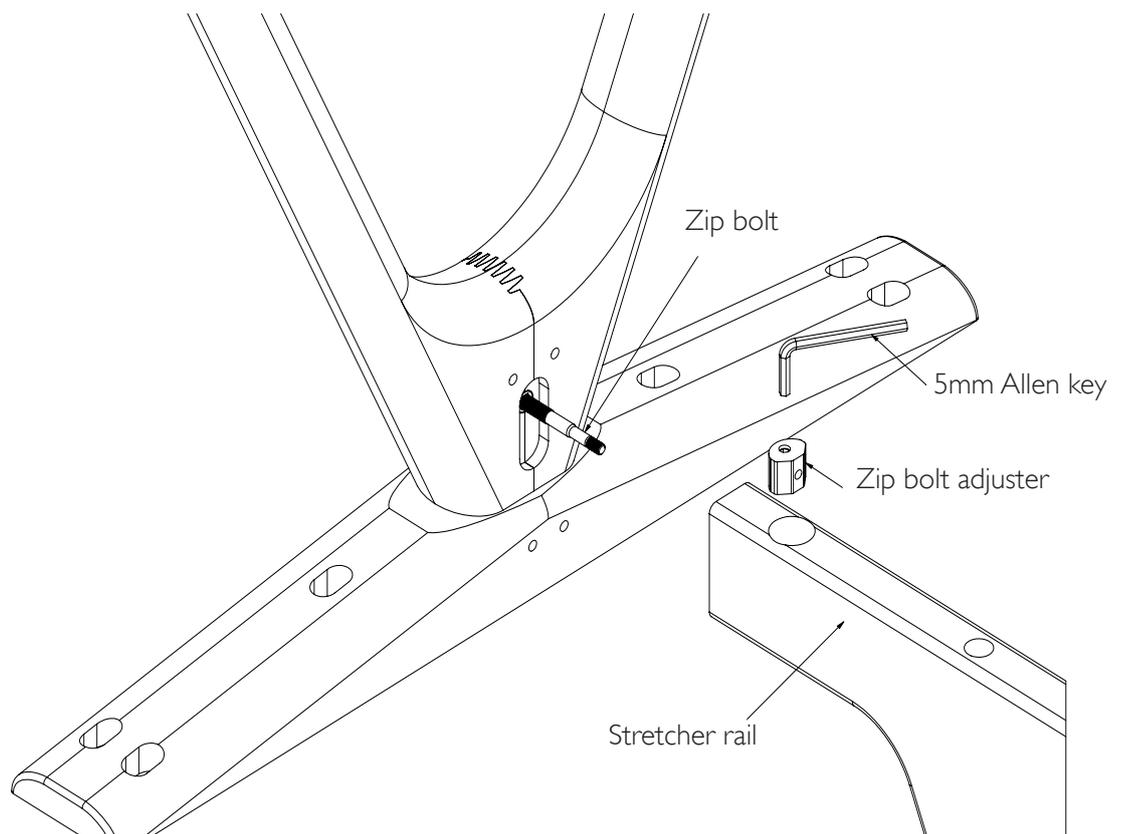


2. Secure the fitting by turning the socket in the zip bolter adjuster (D) clockwise with the 5mm Allen key (F), Fasten until hand tight.

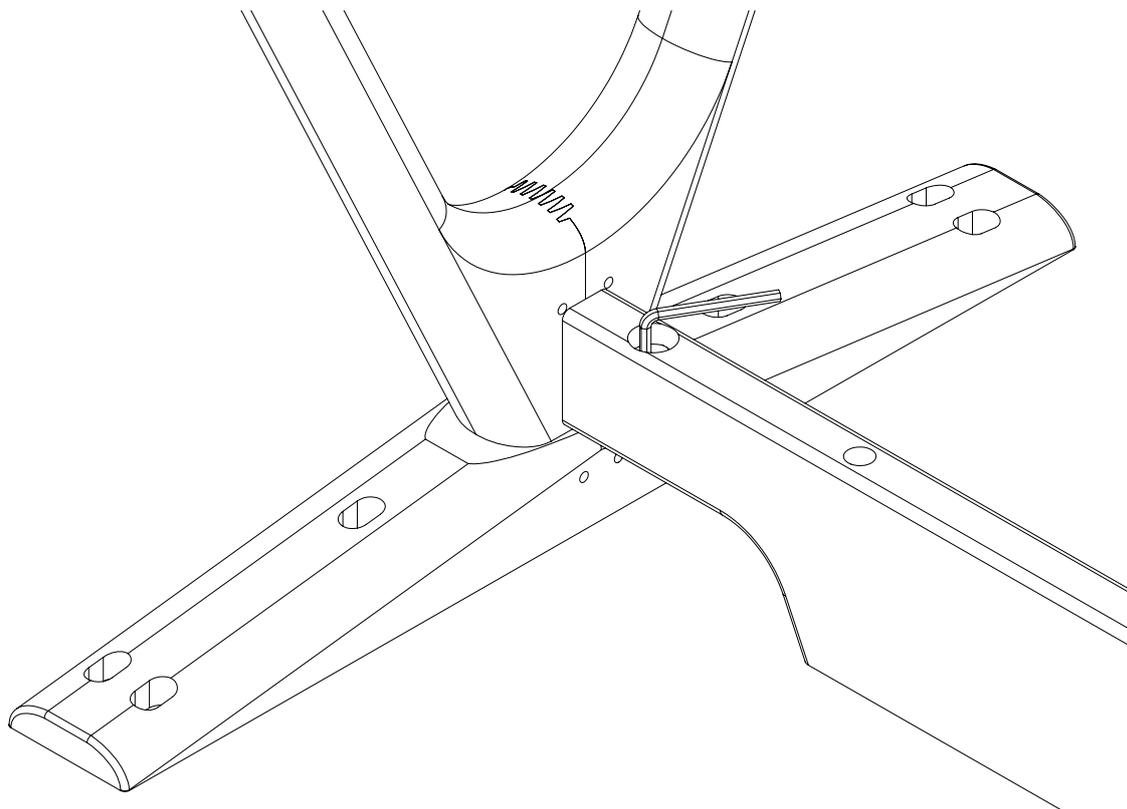

3. Once the underframe is assembled, secure to the underside of the table top. Fasten with the relevant connector bolts using the 4mm Allen key (G).

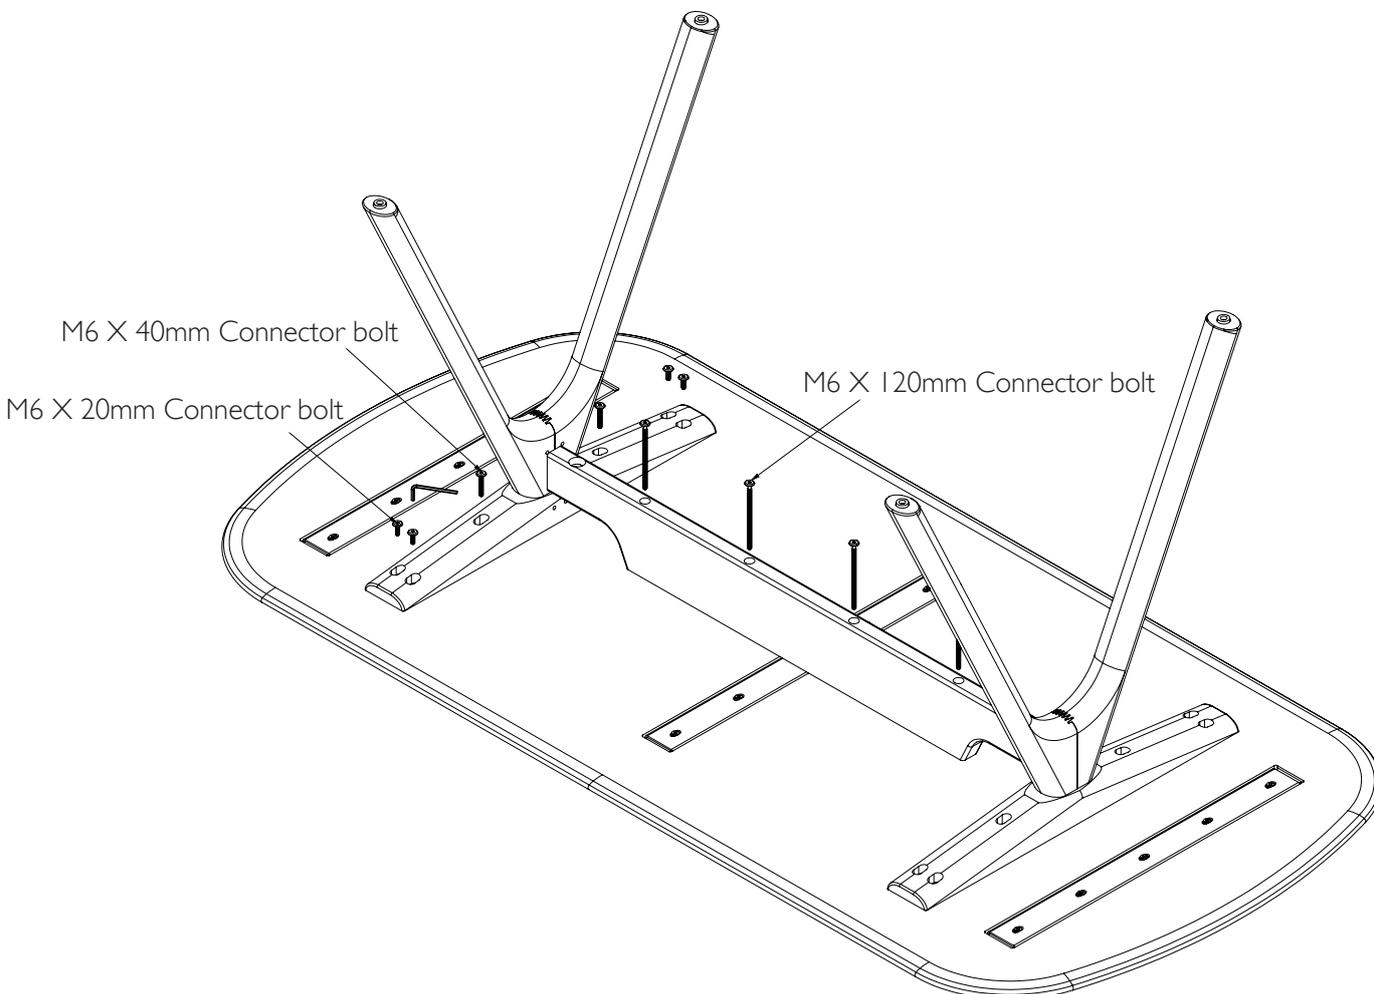

4. Flip the assembled table (2 or more people required) face up.

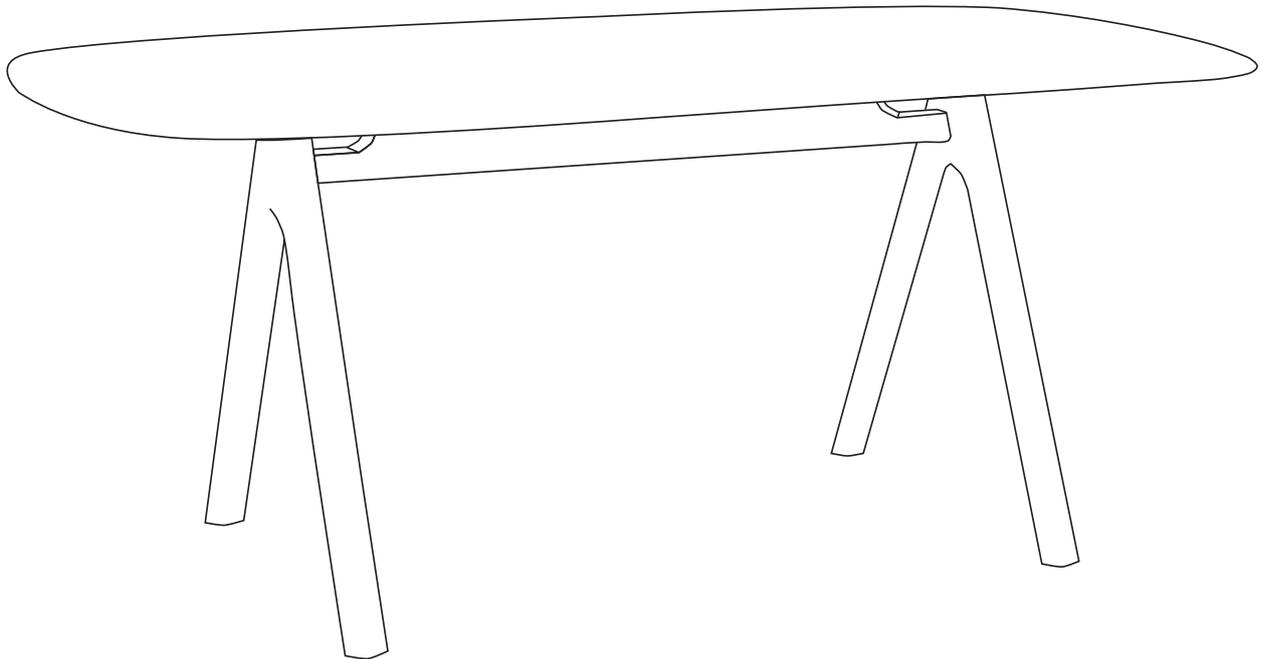

## Customer Care

### Wood Furniture

Wood displays different grain patterns depending on which way it is cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are characteristics of the natural beauty of the wood. All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

### How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth. When using the surface for serving food and drinks it is best to use protective mats and coasters. Spillages should be wiped up as soon as possible. Spray polishes should be avoided as they can contain silicones which may spoil the furniture's surface by building up over time. Use of cleaning materials containing abrasive compounds, acidic or caustic reagents and any bleaches containing oxidising reagents should be avoided as prolonged use may damage the lacquer surface. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water. The area should be rubbed lightly and then completely dried immediately afterwards, before replacing any mats etc. Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage, such as warping.

### Safety Instructions

Never drag furniture when moving it, always lift it. Take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

### PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX [ercol.com](http://ercol.com)