



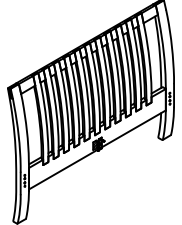
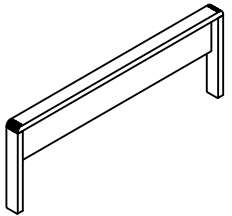


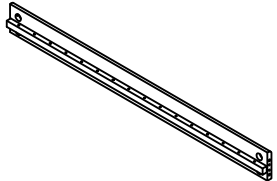

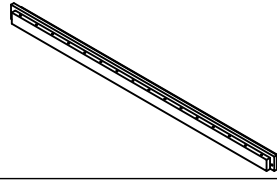








erco | 1361 bosco kingsize bed assembly instructions

NO.	DESCRIPTION	PARTS	QTY
A	Headboard		1
B	Footboard		1
C	Side Rail		2
D	Support Rail		1
E	Spring Slat		34
F	Plastic End Cap		68
G	Bolt	 M8X90mm	8
H	Bolt	 M6X35mm	2
I	Half moon Washer		8
J	Spanner		1
K	Nut	 M8	8
L	Screw	 4X20mm	12
M	Bracket		2
N	Allen Key		1
O	Nut	 M6	2


①



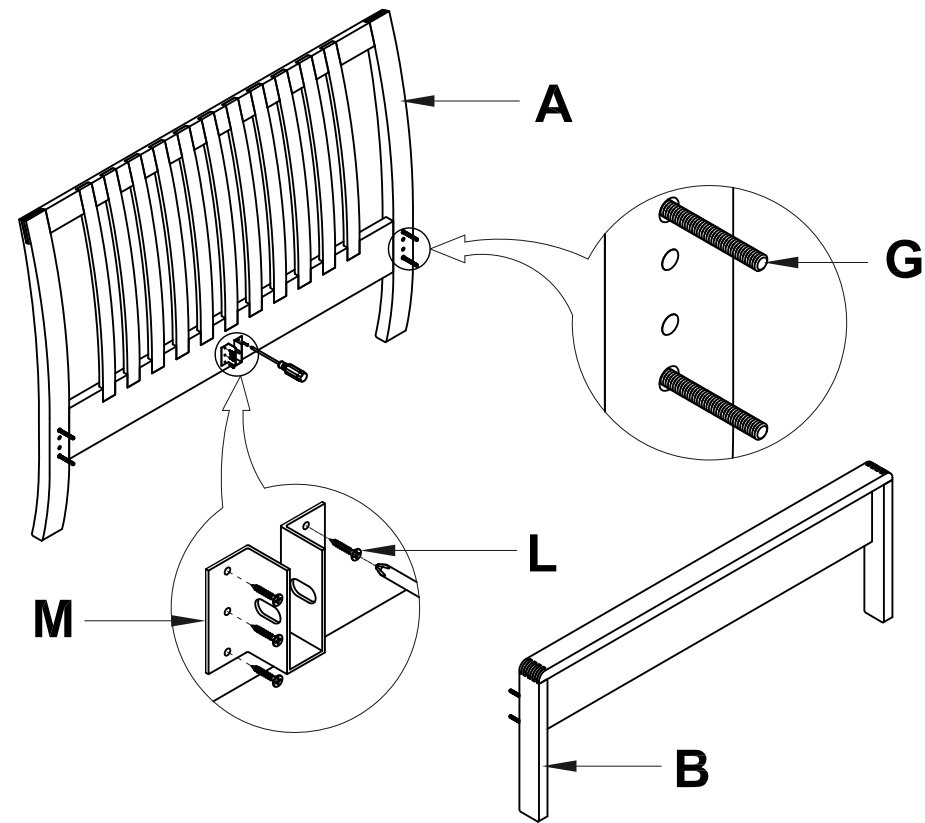②

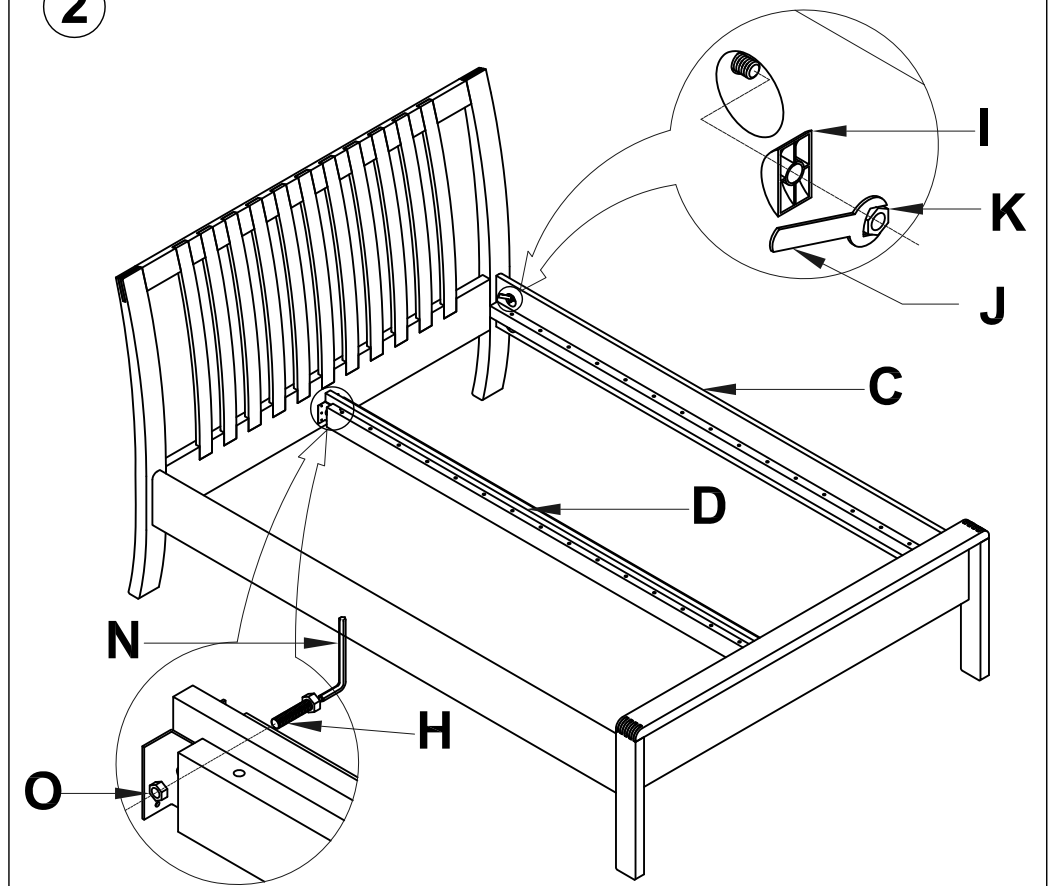

③

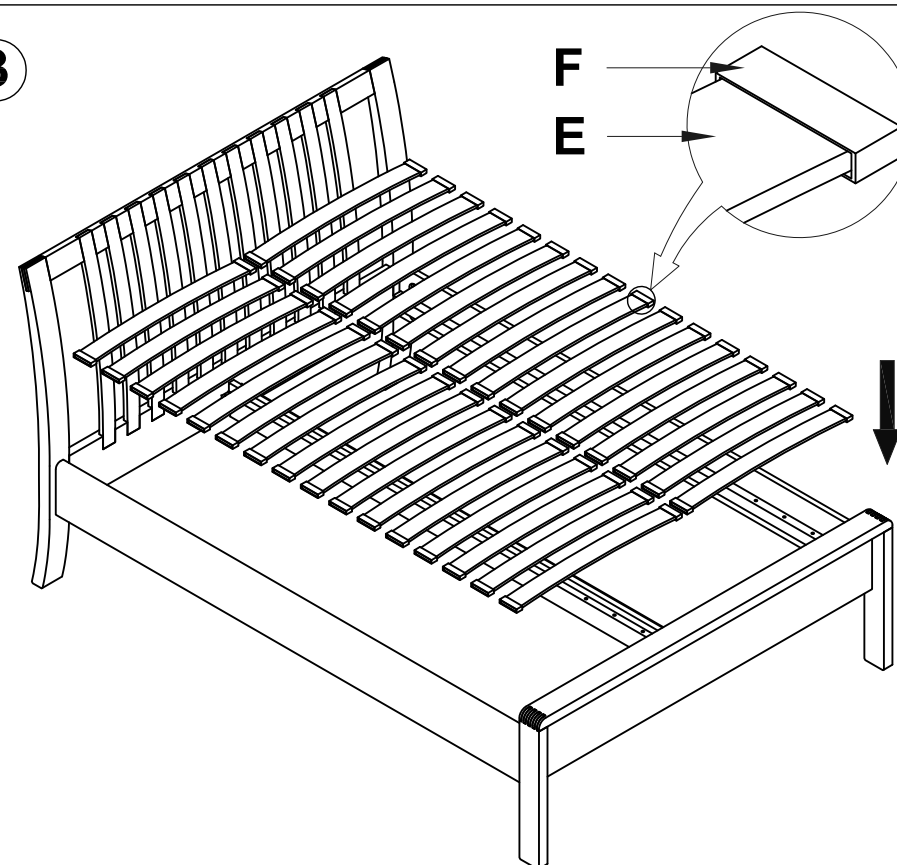

④

