


ercol

Monza Beds 4180/4181 Double/King Bed

Thank you for purchasing this Monza bed. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

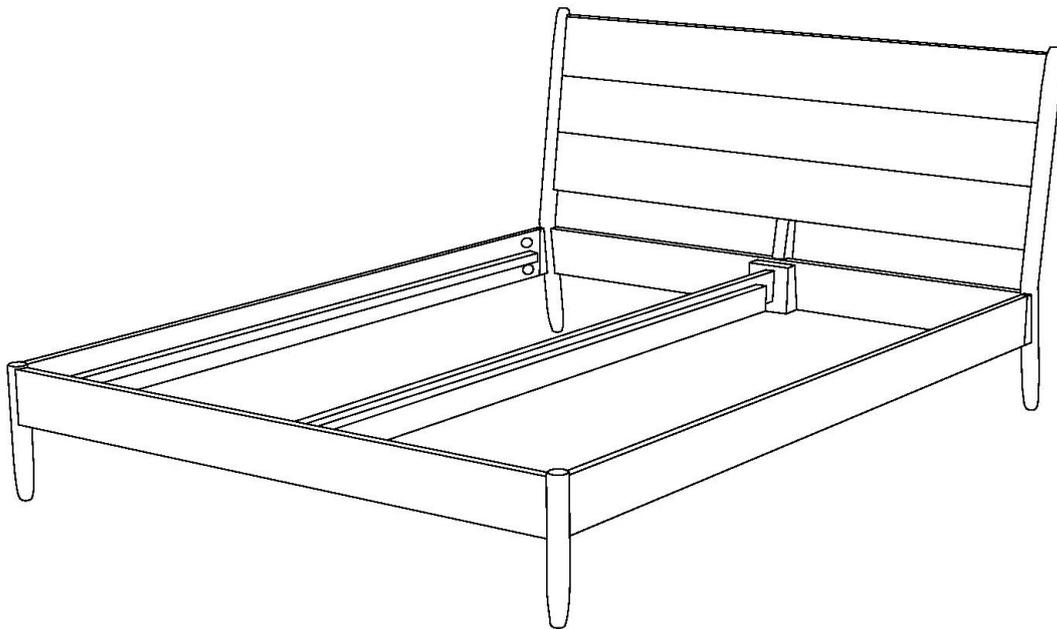

This item is **HEAVY**



Necessary Tools



Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


This product takes approximately **30 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Ref: 00329/4180, 4181

Fittings and parts checklist

A	Headboard x 1		H	Half moon washer x 8	
B	Footboard x 1		I	Spanner x 1	
C	Side rails x 2		J	Central brackets x 2	
D	Support rail x 1		K	Washers x 2	
E	Double Bed slats x 32 King Bed slats x 34		L	Nuts and bolts x 2 each	
F	Ends cap for double bed slats x 64 Ends cap for king bed slats x 68		M	25mm Screws x 12	
G	Threads x 8				

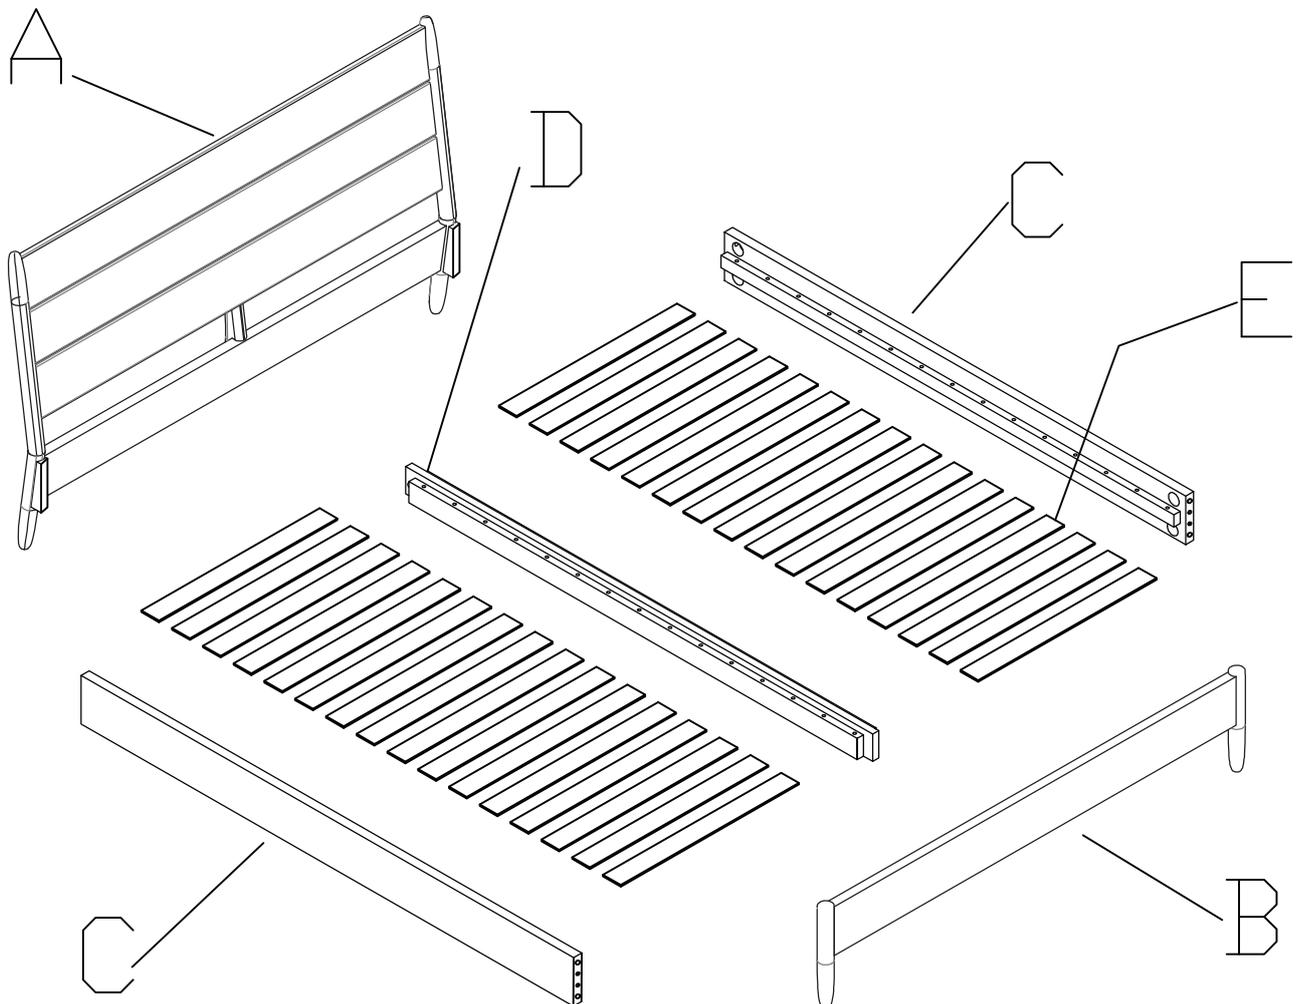


Step by step assembly instructions


1. Push the threads (G) into the headboard and footboard as shown below.

Tighten the threads by hand ensuring that there is approximately half of the threads still showing.


Using the 12 x 25mm screws (M), attach the two brackets (J) into the headboard and the footboard using the pre-drilled holes, tighten with a phillips screwdriver.

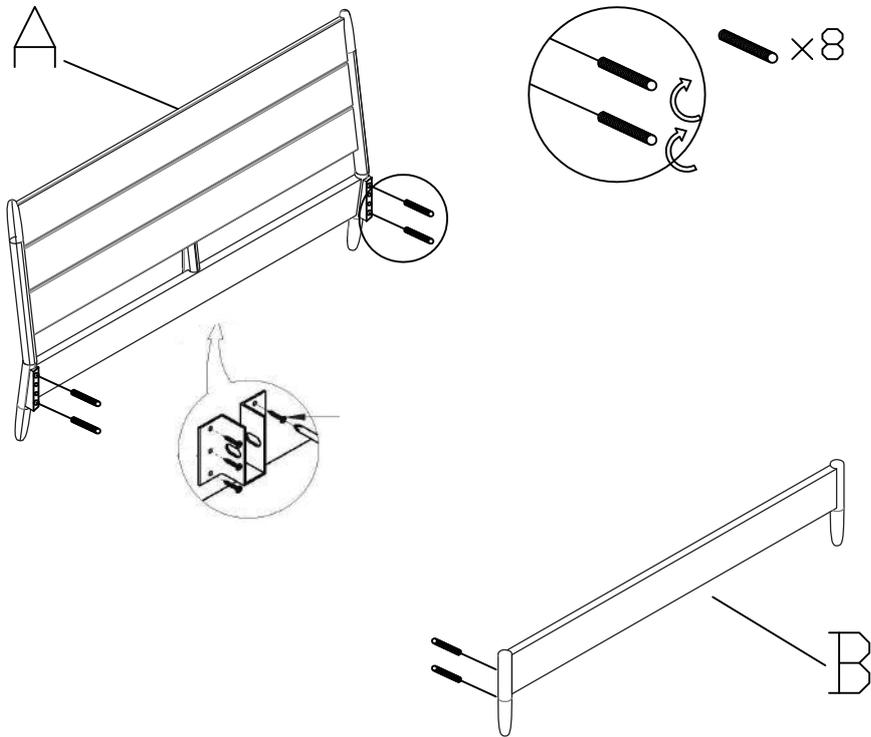


2. Making sure the holes in the side rails (C) are facing upwards, AND that you have the Left and Right rails, (see page 2) on the correct sides, locate the side rails onto the protruding threads on the headboard and foot board. As you do this, slide a half moon washer onto the thread when it comes through into the circular hole in the side of the rail, then screw on one of the 8 nuts FINGER TIGHT ONLY. Repeat with the other 3 corners. then TIGHTEN FIRMLY WHEN ALL FOUR CORNERS ARE SECURED.

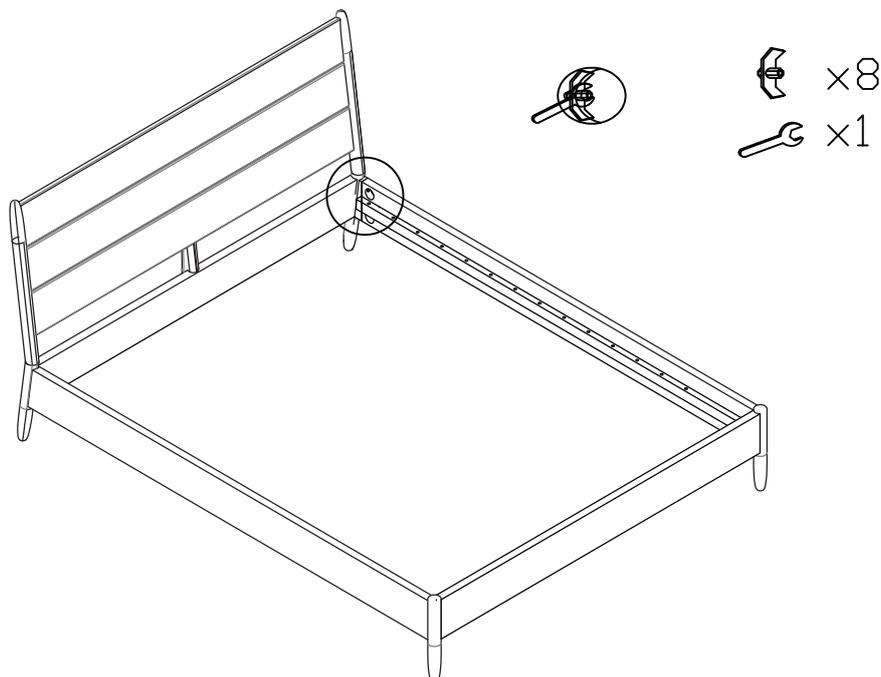

3. Making sure the holes in the centre rail are facing upwards, put the centre rail into the two brackets. Secure it in place using the 2 x 45mm bolts and nuts (L) and 2 washers (K).

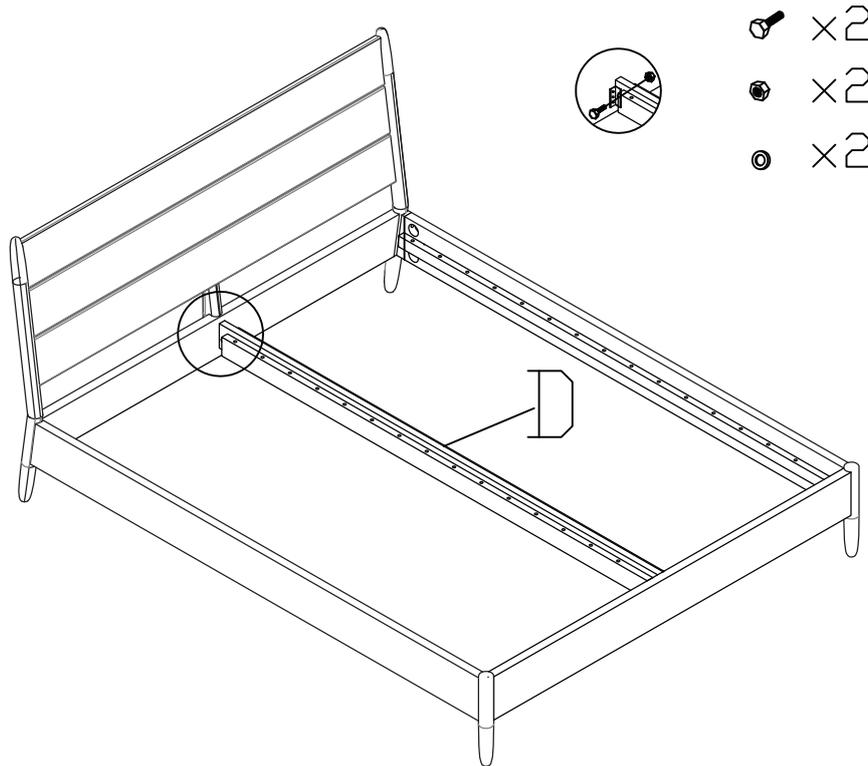

4. Push a plastic cap onto the end of each slat, ensuring that the peg is facing downwards, push the slat into the pre-drilled holes as shown below. Repeat for all of the slats. Assembly is then complete.

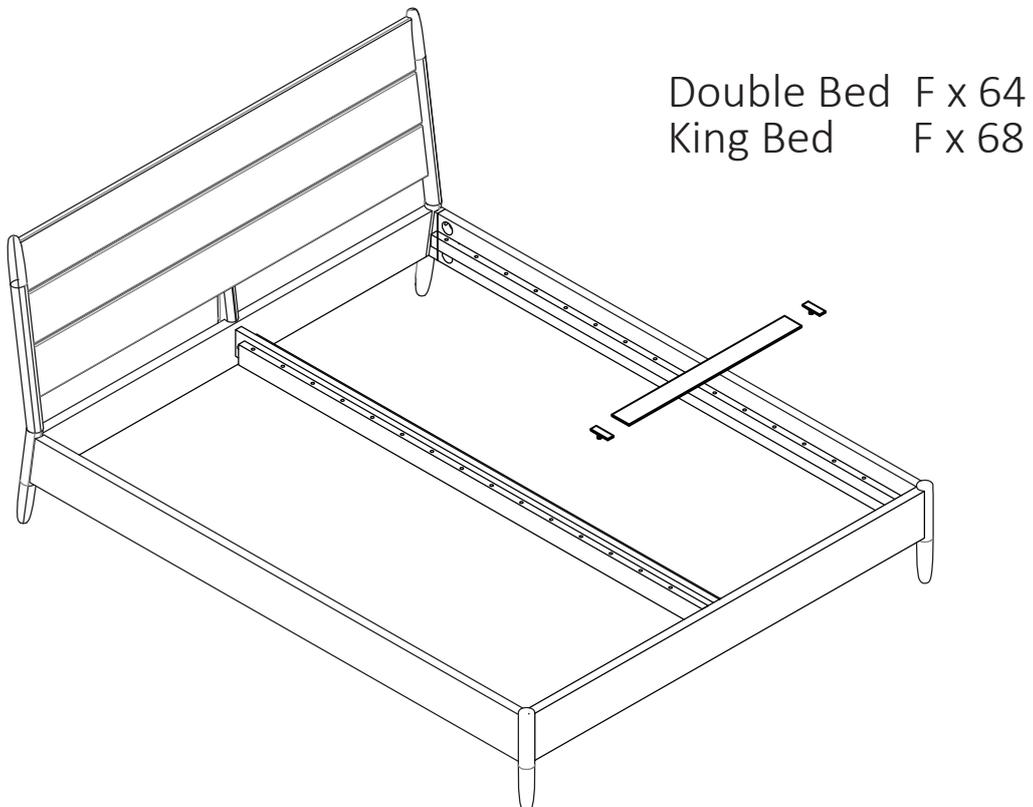

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX www.ercol.com