

windsor

3856 corner cabinet

Thank you for purchasing this ercol product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Installation shall be carried out exactly according to the manufacturers instructions, otherwise a safety risk can occur if incorrectly installed. Cabinets and shelving over 600mm high can be unstable and should be supported until fixed to the wall.

WARNING: In order to prevent overturning this product must be used with the wall attachment device provided.


Position the cabinet in the corner and using a pencil mark the wall through the screw hole in the cabinet.

The screw hole is located below in the cupboard as indicated.

Once you have marked the wall, move the cabinet away from the wall.

Screw the corner block into the two walls making sure your mark on the wall is covered by the block.

Reposition the cabinet in the corner up against the block. Using the appropriate screw for your cabinet screw the cabinet to the block.

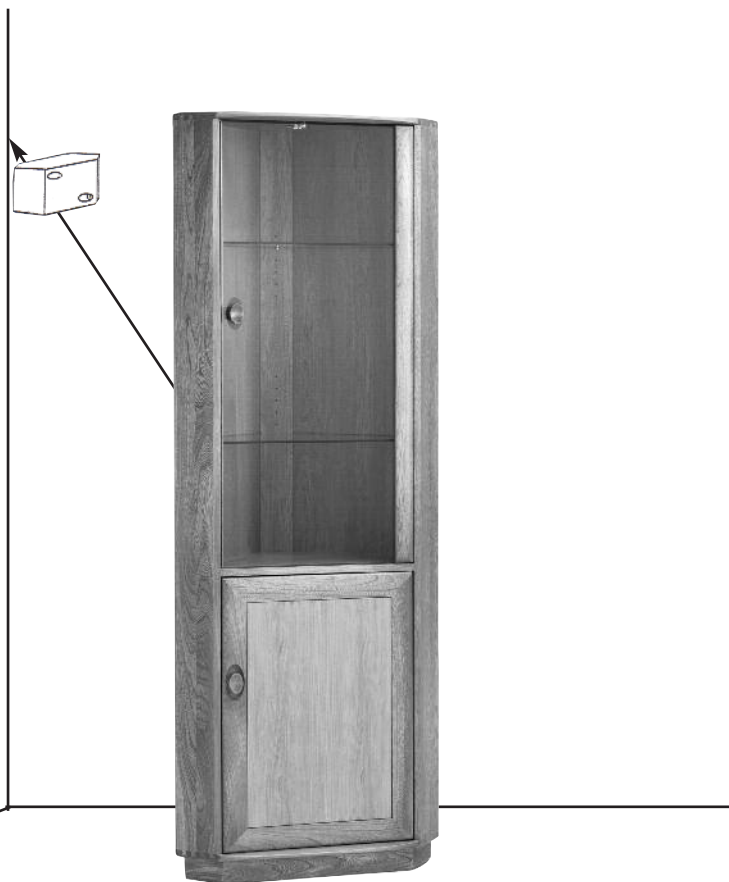


3856 windsor
corner cabinet

Fitting pack contains



1 x M5 50mm counter sunk screw

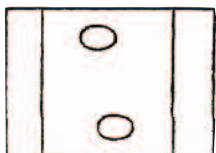

1 x corner block wood

ercol