

# ercol

## 2366 pero low shelving unit

---

Thank you for purchasing this pero shelving unit. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

---



---

### Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

---

#### Necessary Tools




---

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN.**

## Fittings and parts checklist

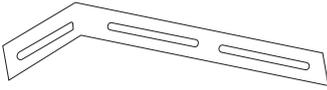A	12 x M6 35mm bolts	
B	1 x allen key	
C	8 x brass shelf supports	
D	1 x Zinc and gold bracket	
E	2 x 16 pan head screw	

## Step by step assembly instructions


1. Lay the top of the unit on the floor. Making sure the shelf pin holes are facing inwards, use the allen key provided to screw 3 of the bolts into each of the legs at both ends **FINGER TIGHT ONLY**. When all 12 are in place tighten fully. Turn the shelving unit upright.
2. Push the shelf pins into the legs at desired heights and place the two shelves onto them.

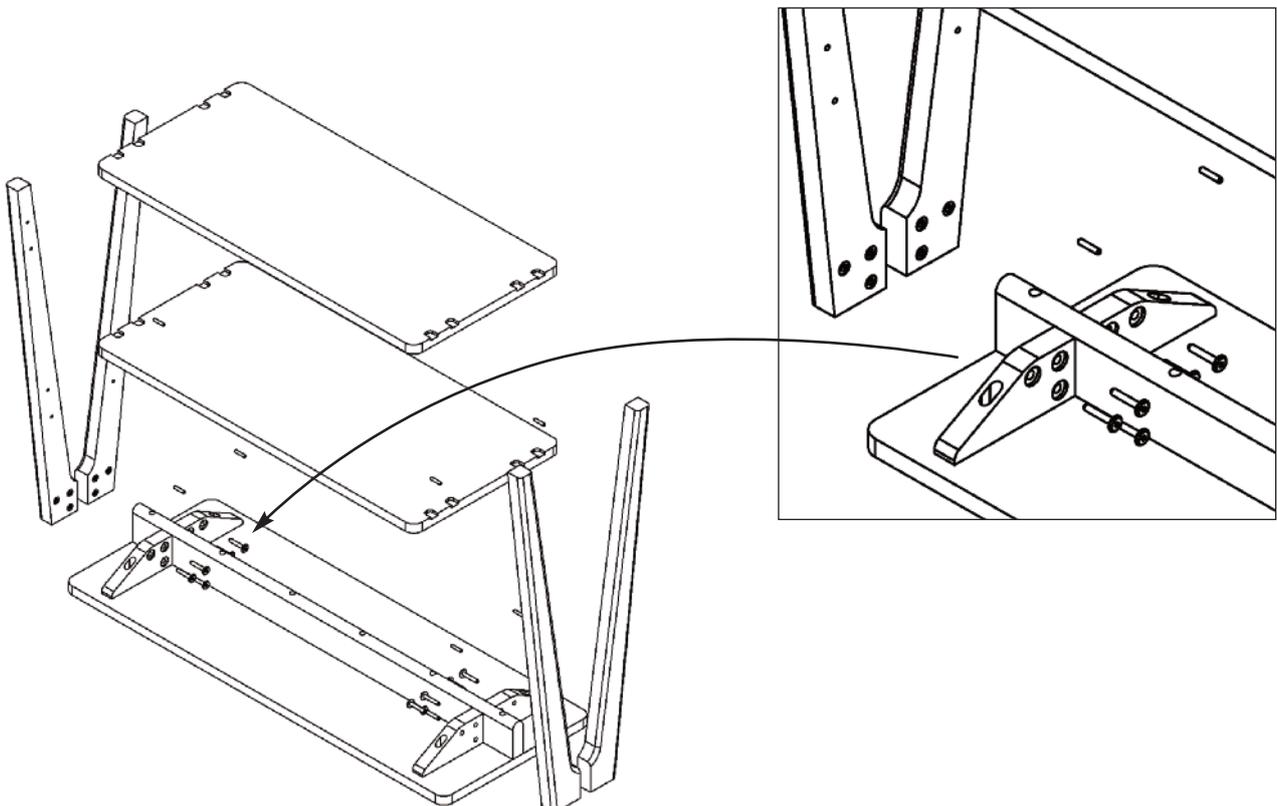

---


## Wall fixing - if in doubt seek professional advice

---

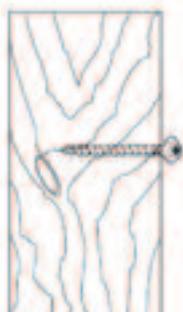


### Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

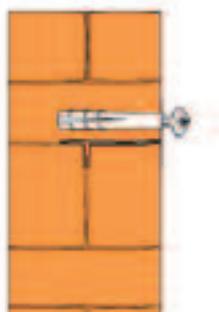

### Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound

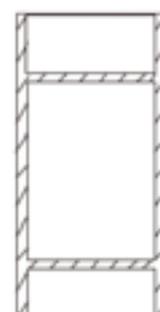

### Cavity wall

Special toggle wall plugs are needed. Seek expert advice

1. To attach the shelving unit to the wall, use the bracket and 2 pan head screws provided. Screw the long end of the bracket to the bottom of the desk in the middle, using the pre drilled pilot holes provided. The shorter end of the bracket should face downwards and be flush with the top edge of the unit.
2. If you don't need to use Rawl plugs in your wall, push the unit to the wall and screw the unit to the wall through the slot on the bracket.
3. **If you do require rawl plugs for your wall.** Push the unit to the wall and mark the wall where the slot on the bracket comes. Take the shelving unit away from the wall.

**Using screws suitable for your type of wall**, see **Wall fixings** above. Drill a hole within your mark of the bracket slot, add rawl plug, place the unit back up against the wall and screw it into your wall.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

PLEASE REFER TO THE ERCOL CARE CARD ENCLOSED WITH YOUR FURNITURE.