


ercol

ENGLAND SINCE 1920

2205 BALLATTA DRINKS CABINET

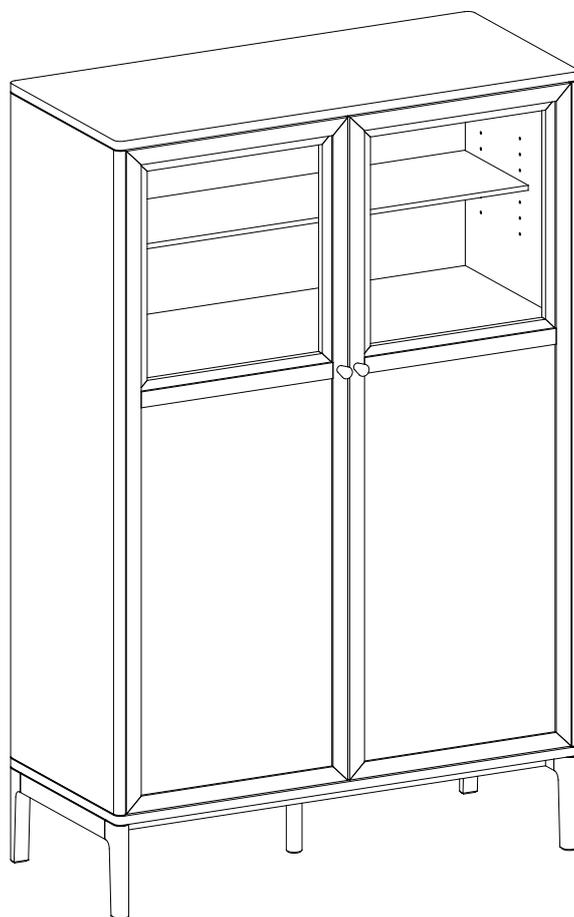

Thank you for purchasing this Ballatta drinks cabinet. Please ensure instructions are read in full before attempting to assemble product.

WARNING:

IN ORDER TO PREVENT OVERTURNING, THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.

Installation should be carried out exactly according to the manufacturers instructions, otherwise a safety risk can occur if incorrectly installed. Cabinets and shelving over 600mm high can be unstable and should be supported until fixed to the wall.

This product is heavy, it should be assembled as near as possible to the point of use. Take care when lifting to avoid personal injury and (or) damage to the product.

The fittings pack contains small items which should be **KEPT AWAY FROM YOUNG CHILDREN.**

Read this leaflet in full before commencing assembly.

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

Pre-assembly preparation



Items you will need





This is a two person operation

Fitting checklist

A	2 x screw (chrome - 3.5mm x 16mm)	
B	1 x allen key (M.4)	
C	1 x wedge	


Centre Leg Adjustment

You can adjust the centre leg height by turning it clockwise or counter-clockwise. Screw the leg in fully before moving the cabinet.

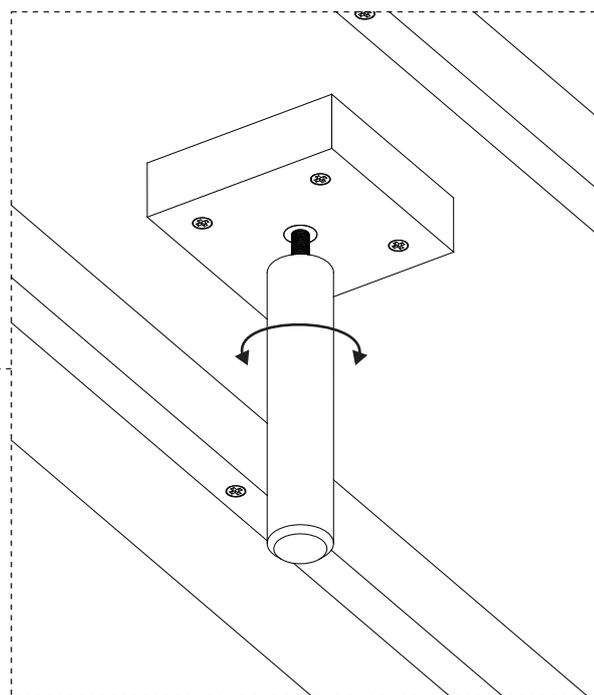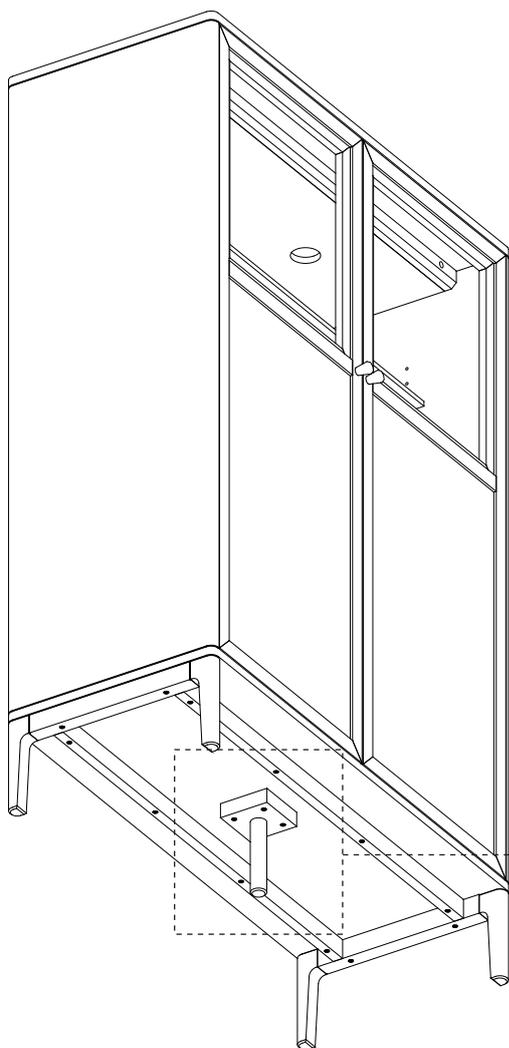


Door Adjustment

You can adjust the door hinges as shown below.

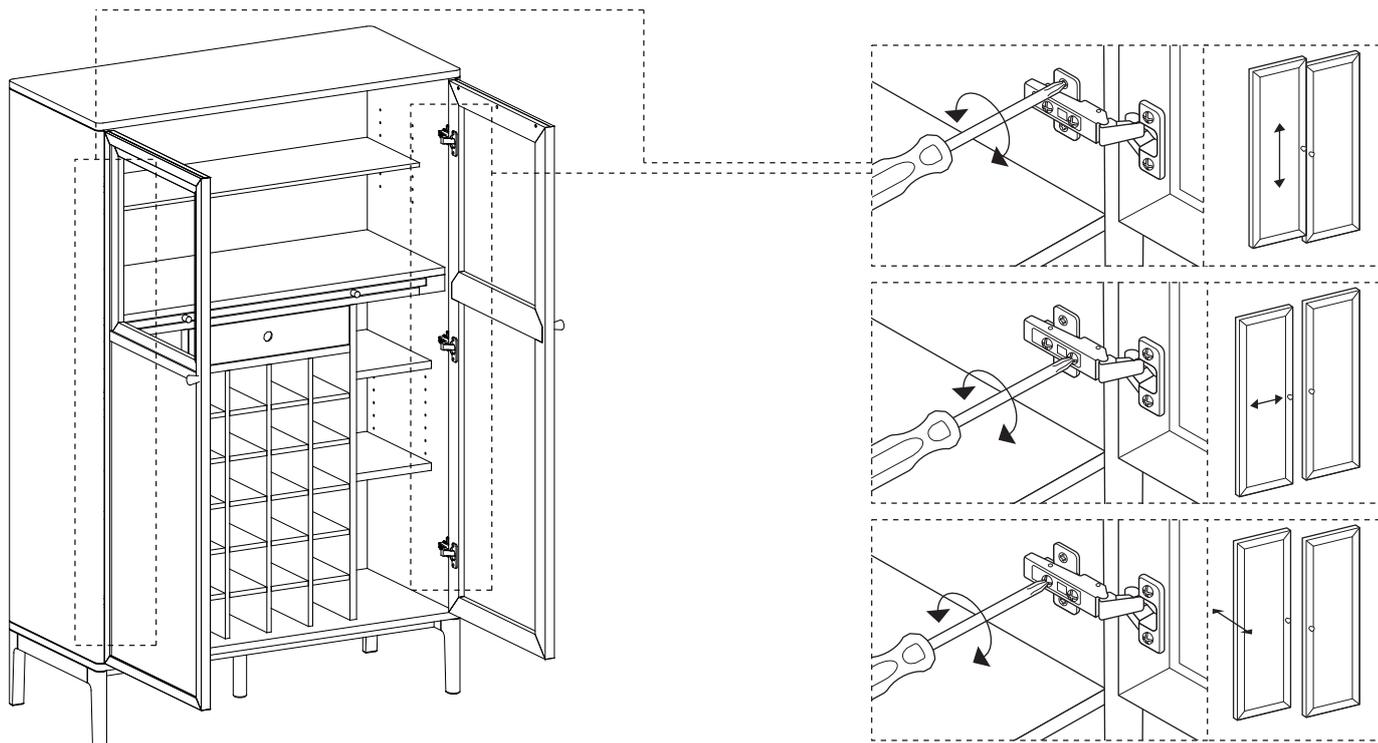


Removable Wine Rack

You can remove the wine rack as shown below.

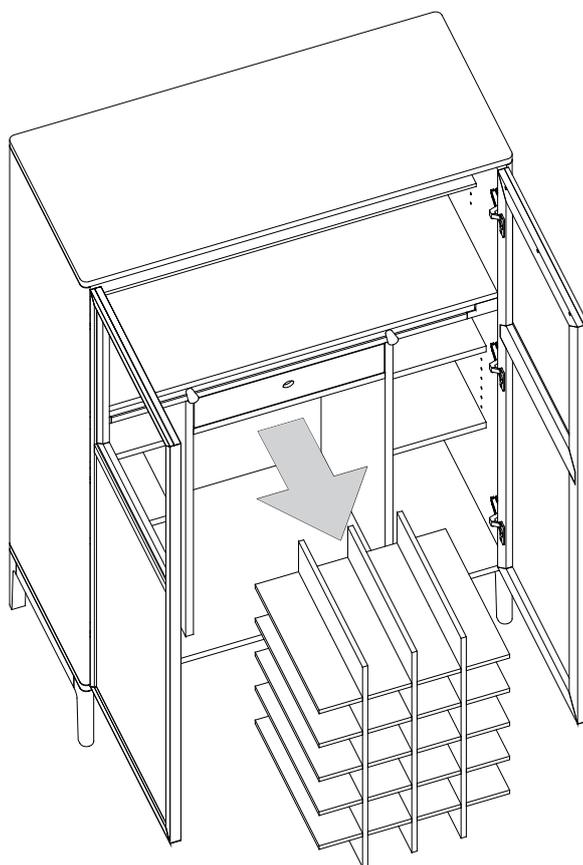

Changing Door Glass

In order to change the door glass, first remove the three screws from the top-back side of the door. Then take out the top-front frame to be able to remove the glass. Replace the glass by sliding it downwards and fix the top-front frame back with the same three screws.

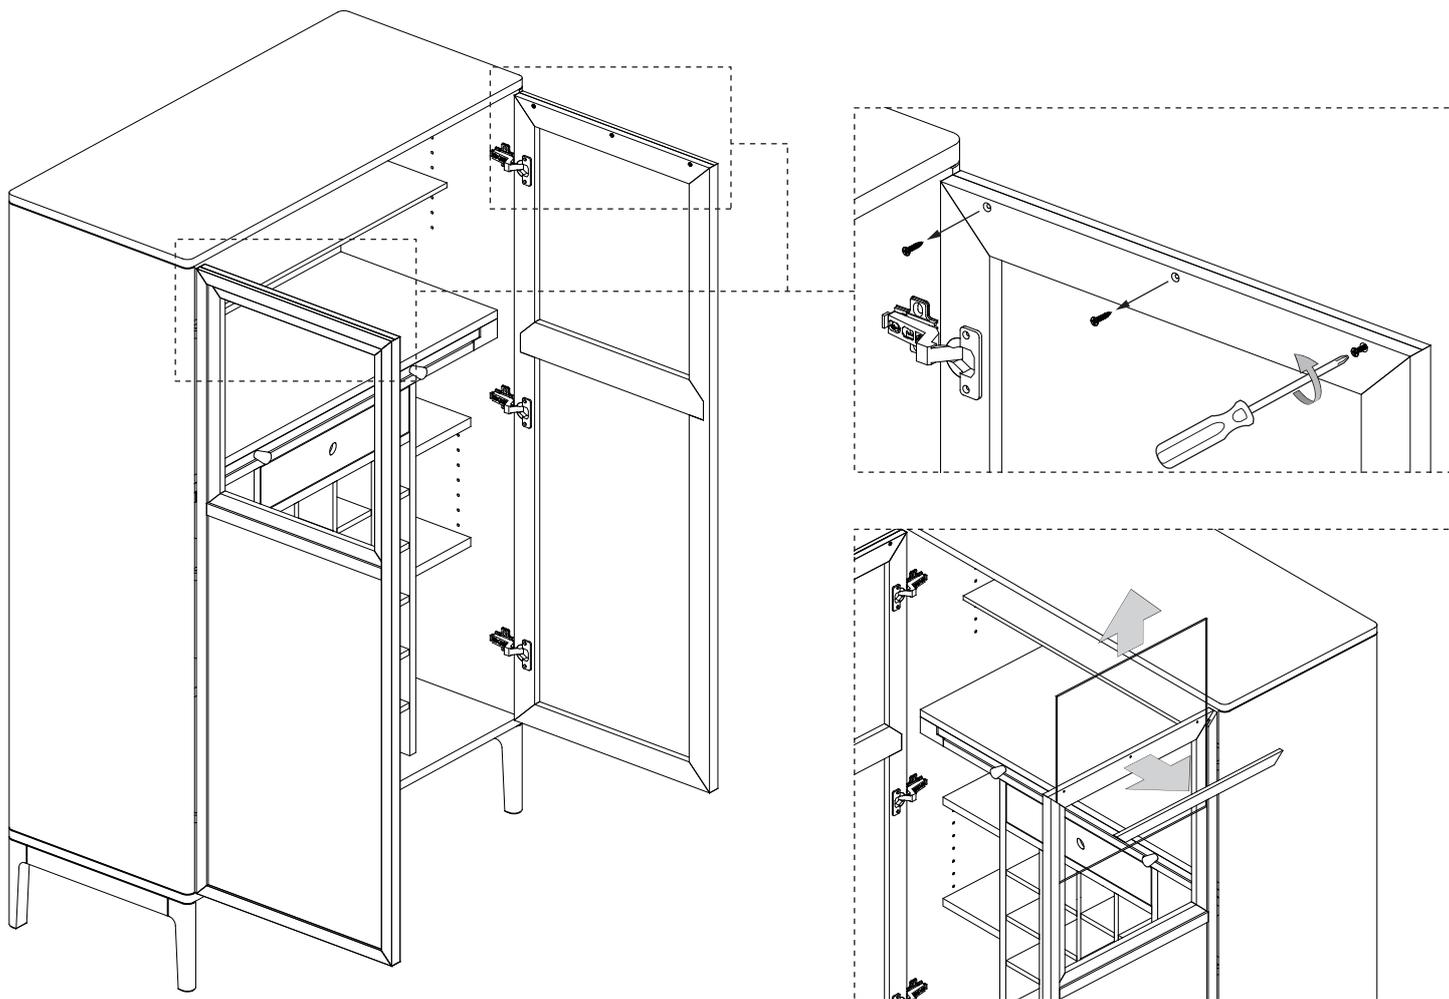


Note: Ercol do not hold stock of replacement glass, however if needed the specifications of the glass shelf and the door glass are

—— **Shelf:** 961 mm x 256 mm x 10 mm - 4 edges chamfered, tempered glass

—— **Door glass:** 432 mm x 474 mm x 4 mm - 4 edges sanded, tempered glass

Wedge Instructions

If the drinks cabinet is not level on your floor use the wedge (C) provided, and snap it off so that it does not protrude out from the cabinet's leg, you can also snap it lengthways if desired.

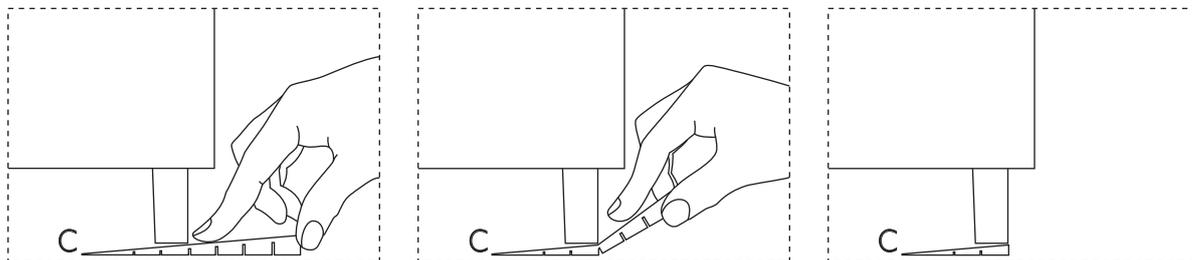

Wall Fixing Instructions

Parts, fittings and tools

1 Remove the inner top panel by removing two allen head bolts using an allen key (B).

2 Place your product in the final position. Loosen the screws on the metal brackets just enough so that the slotted bracket can be extended to meet the wall.

3 Then re-secure the screws.

4 Mark the wall for drilling through the hole in the short face of the bracket.

Then move the unit away from the wall so that the marked holes can be drilled.

Ensure you use an appropriate fixing type for your wall (see page 6). Then return the unit to its final position.








5 Secure the unit to the wall fixings with own screws through the brackets.

6 Finally add the extra securing screws to the holes in the long faces of the brackets and tighten.



Warning

Serious or fatal crushing injuries can occur from furniture tipping over. To prevent this furniture tipping over it must be permanently fixed to the wall.

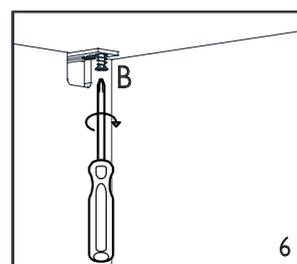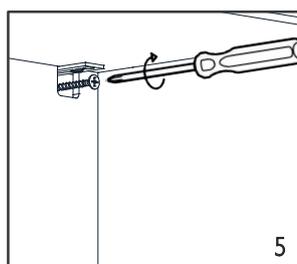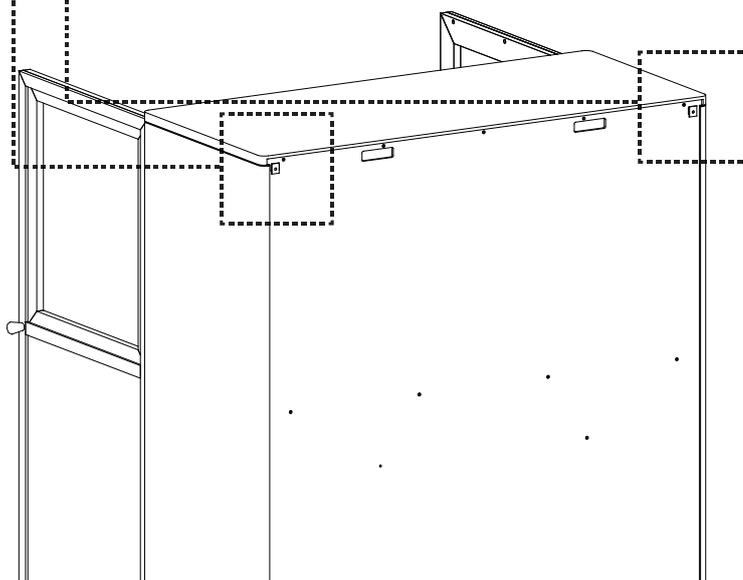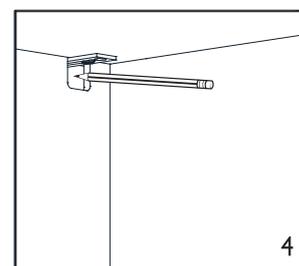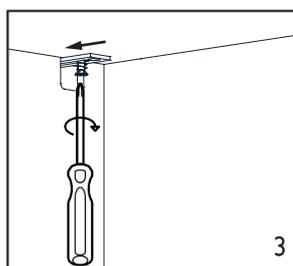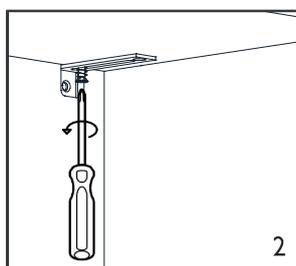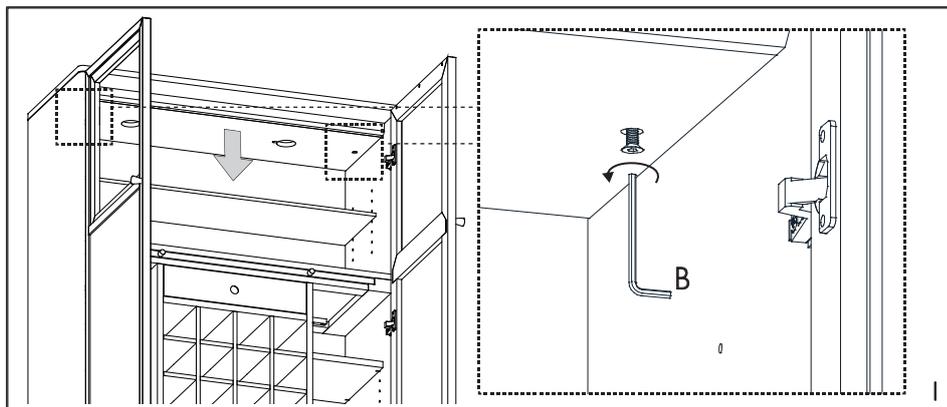



Warning

Serious or fatal crushing injuries can occur from furniture tipping over. To prevent this furniture from tipping over it must be permanently fixed to the wall.


Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.


Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

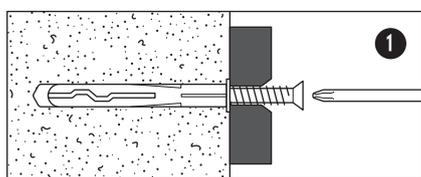


1. General Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

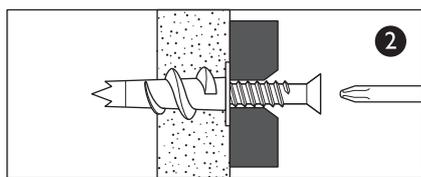


2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

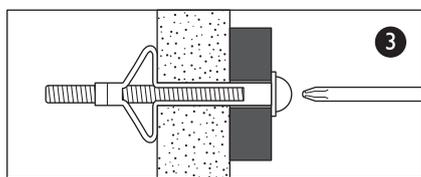


3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

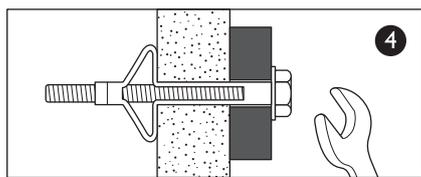


4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

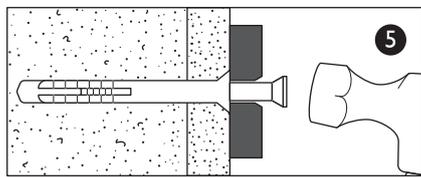

5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

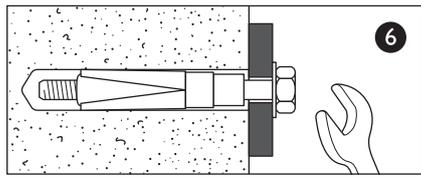

6. Shield Anchor wall plug - Heavy loads

For use with heavier loads such as TV and Hi-Fi speakers and satellite dishes etc.



Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way it is cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with hard lacquer, wax polish or painted surface should be dusted with a dry cloth. When using the surface for serving food and drinks it is best to use protective mats and coasters. Spillages should be wiped up as soon as possible.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time. Use of cleaning materials containing abrasive compounds, acidic or caustic reagents and any bleaches containing oxidising reagents should be avoided as prolonged use may damage the lacquer surface. Wipe up spills immediately. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water. The offending area should be rubbed lightly and then completely dried immediately afterwards, before replacing any mats etc.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it. Please take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE